



3 STROBE LIGHT FUNCTIONS

TESTING YOUR BATTERY

Pressing for 1 second will give you a 2-FLASH confirmation that your strobe is working and has battery. If there is no flash, this means your Strobe needs to be charged.

(1) HIGH STROBE MODE

TURN ON: Press down for 3 seconds
TURN OFF: Press down for 3 seconds

2 LOW STROBE MODE

TURN ON: Press down for 3 seconds (activating High Strobe) then press once more for 1 second (activating Low Strobe)

TURN OFF: Press down for 3 seconds



(3) CONTINUOUS MODE (ALWAYS ON)

TURN ON: Press down for 3 seconds (activating High Strobe) then press once more for 1 second (activating Low Strobe) then press a second time for 1 second (activating Continuous Mode).

TURN OFF: Press down for 3 seconds

GETTING STARTED

 
(1)

ATTACH 3M™ VELCRO

Included is your 3M[™] Dual Lock[™] velcro to mount your STROBE to your drone. Any side can be mounted to your STROBE.

- Peel off the 3M[™] protective film and stick your Velcro to your STROBE (figure 1).
- Peel off the 3M" protective film from the other side (figure 2) and stick that anywhere on your drone that you'd like your STROBE to be placed.

*NOTE: Be sure to place where the propellers will not hit the Anti-Collision STROBE.





2

CHARGING

- · Micro USB charging port
- Approximate Charge Time +/- 60 minutes
- · When plugged in STROBE will flash while charging
- · Flashing will stop when fully charged



Micro USB Port

(3)

COLOR CAP MOUNTING

Locate the micro USB port on your STROBE. Now, on the back end of the color cap, locate the cutout. Place the cutout over the micro USB port (figure 1) and bring the front end of the cap down over the STROBE until it snaps into place (figure 2).



Micro USB Port

SUPPORT & ACCESSORIES

Email customer service with any product-related issues or questions: support@lumecube.com. If you'd like to explore accessories for your STROBE or other drone-related products, visit: LUMECUBE.COM/DRONE