

© Arlo Technologies, Inc. Arlo, Arlo logo, and Every Angle Covered are trademarks of Arlo Technologies, Inc. Apple is a trademark of Apple Inc., registered in the US and other countries. App Store is a service mark of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC. Any other trademarks are for reference purposes.

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à [arlo.com/docs](https://www.arlo.com/docs).


(If this product is sold in Canada, you can access this document in Canadian French at [arlo.com/docs](https://www.arlo.com/docs).)

For regulatory compliance information including the EU Declaration of Conformity and where to find e-label information for US FCC & Industry Canada, visit www.arlo.com/about/regulatory/.

CE Arlo Technologies Intl. Ltd.
Ground Floor, Building 3
University Technology Center
Curraheen Road, Cork, T12 EF21
Ireland

Arlo Technologies, Inc.
2200 Faraday Avenue, Suite 150
Carlsbad, CA 92008 USA

 March 2021



201-50534-01



Set up your Pro 4 Spotlight Camera

1. Download the Arlo app.



2. Follow the setup instructions for your camera.

What's in the box



Pro 4 Camera with
Anti-Theft Mount



Wall Plate



Screw Kit



Security Key



Camera
Rechargeable
Battery



Dual Charging Station



 
Dual Charging Station
Power Adapter

Mount your camera

We recommend that you use your Dual Charging Station to fully charge the camera battery before you mount the camera.

1. Place the wall plate with the arrow pointing up and secure it with screws.

For drywall, use the provided wall anchors.

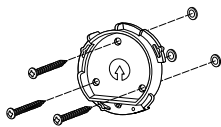


2. Insert your camera with its battery into the Anti-Theft Mount housing.

3. To attach the housing to the wall plate:

Align the small screw in the housing with the dot on the wall plate.

Turn the housing clockwise until it clicks into place.

 
Use the security key to tighten the small screw.

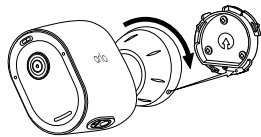

4. Adjust your camera position, then finger-tighten the mount lock (clockwise) to lock the camera in this position.



 Note: To release your camera from the housing, insert the security key into the security keyhole and turn the key clockwise.

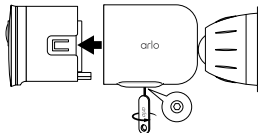

Need help?

We are here for you.

Visit www.arlo.com/support for quick answers and:

- How-to videos
- Troubleshooting tips
- Additional support resources

Battery charging

You can use the Dual Charging Station to charge Arlo Pro 4, Ultra, Floodlight, and XL rechargeable batteries.

1. Connect the power adapter to the charging station.
2. Plug the power adapter into an indoor electrical outlet.
3. Insert one or two Arlo rechargeable batteries.

