# Dell Latitude 14 Rugged – 5414 Getting Started Guide



## Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2016 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

## **Contents**

1 Finding information and resources	5
2 System overview	6
3 Quick setup	9
4 Removing and installing components	11
Opening the hard drive bay doors	
Closing the hard drive bay doors	11
Removing the battery	11
Installing the battery	12
Removing the hard drive	12
Installing the hard drive	12
5 Working on your computer	13
Using the backlit keyboard	13
Turning the keyboard backlight on/off or adjusting brightness	13
Changing the keyboard backlight color	13
Customizing the backlit keyboard in System Setup (BIOS)	14
Function Fn key lock features	14
Enabling the Function (Fn) lock	15
Stealth mode	15
Turning stealth mode on/off	15
Disabling stealth mode in the system setup (BIOS)	15
Enabling and disabling the wireless (WiFi) feature	16
6 Smart cards	17
7 Technical specifications	18
System information specifications	
Processor specifications	
Memory specifications	18
Battery specifications	19
Audio specifications	
Video specifications	
Communication specifications	
Port and connector specifications	
Display specifications	21

9 Contacting Dell	24
Environmental specifications	23
Physical dimension specifications	22
Adapter specifications	22
Keyboard specifications	22
Touchpad specifications	21

1

## Finding information and resources

See the safety and regulatory documents that shipped with your computer and the regulatory compliance website at **Dell.com/regulatory\_compliance** for more information on:

- Safety best practices
- Regulatory certification
- Ergonomics

See **Dell.com** for additional information on:

- Warranty
- Terms and Conditions (U.S. only)
- End User License Agreement

Additional information on your product is available at **Dell.com/support/manuals**.

# System overview


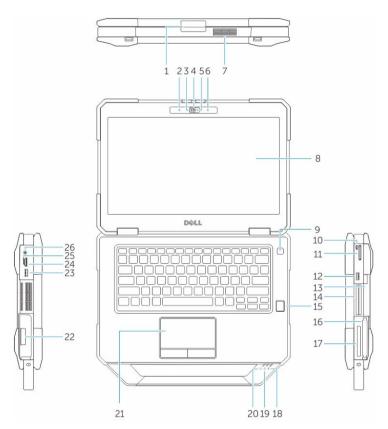


Figure 1. System overview

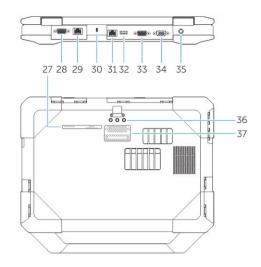

- 1. display latch
- 3. privacy shutter (optional)
- 5. camera-status light (optional)
- 7. QuadCool thermal chamber
- 9. power button
- 11. SD Card reader
- optical disk drive (optional)/hot-swap bridge battery (optional)
- 15. fingerprint reader (optional)
- 17. PCMCIA/ExpressCard reader (optional)
- 19. hard-drive status light
- 21. touchpad
- 23. USB 3.0 port with PowerShare
- 25. SIM card slot
- 27. service tag label
- 29. secondary network port (optional)
- 31. network port
- 33. serial port
- 35. power adapter port
- 37. docking device connector

- 2. microphone
- 4. camera (optional)
- 6. microphone
- 8. outdoor readable display/touchscreen (optional)
- 10. stylus
- 12. USB 3.0 port
- 14. smart-card reader (optional)
- 16. hard drive
- 18. battery status light
- 20. power status light
- 22. battery
- 24. HDMI port
- 26. audio port
- 28. secondary serial port (optional)/ Fischer power adapter port (optional)
- 30. security cable slot
- 32. USB 2.0 port
- 34. VGA port
- 36. radio frequency pass-through connectors

Δ

CAUTION: EXPLOSION HAZARD—External connections (power adapter port, HDMI port, USB ports, RJ-45 port, serial ports, audio port, Smart Card reader slot, SD card reader slot, Express Card reader slot, PC card reader slot, SIM card slot) should not to be used in a hazardous location.



WARNING: Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your Dell computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire. The computer turns on the fan when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.

## **Quick setup**

A WARNING: Referen

WARNING: Before you begin any of the procedures in this section, read the safety information that shipped with your computer. For additional best practices information, see www.dell.com/regulatory\_compliance

WARNING: The AC adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to the power strip or electrical outlet may cause fire or equipment damage.

CAUTION: When you disconnect the AC adapter cable from the computer, grasp the connector, not the cable itself, and pull firmly but gently to avoid damaging the cable. When you wrap the AC adapter cable, ensure that you follow the angle of the connector on the AC adapter to avoid damaging the cable.

**NOTE:** Some devices may not be included if you did not order them.

1. Connect the AC adapter to the AC adapter port on the computer and to the electrical outlet.



Figure 2. AC adapter

2. Connect the network cable (optional).

 


Figure 3. Network connector

3. Connect USB devices, such as a mouse or keyboard (optional).



Figure 4. USB connector

**4.** To turn on the computer, open the computer display and press the power button.



Figure 5. Power button



NOTE: It is recommended that you turn on and shut down your computer at least once before you install any cards or connect the computer to a docking device or other external device, such as a


## Removing and installing components

 This section provides detailed information on how to remove or install the components from your computer.

### Opening the hard drive bay doors

There are six press-latch doors. Please see System Overview to see the location of the drive bay doors.

- 1. Push the latch button down.
- 2. Pull the door open and away from the computer.



### Closing the hard drive bay doors

Follow the steps below to close the press-latch doors:

- 1. Rotate the door back towards the computer.
- 2. Press the door until it clicks and latch is engaged.

### Removing the battery



WARNING: Using an incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell. The battery is designed to work with your Dell computer. Do not use a battery from any other computer with your computer.



WARNING: Before removing or replacing the battery:

- 1. Turn off the computer.
- 2. Disconnect the AC adapter from the electrical outlet and the computer.
- 3. Disconnect the modem from the wall connector and computer.
- 4. Remove any other external cables from the computer.

 


WARNING: Not for use in hazardous locations. See installation instructions.




NOTE: The battery is below the latch doors.

- 1. Push the latch button down.
- 2. Pull the door open and away from the computer to expose the battery compartment.



 - **3.** To remove the battery:
  - a. Push and hold the battery release button to the right while pulling on the plastic battery tab.




## Installing the battery

- 1. Slide the battery into its slot until it clicks into place.
- 2. Press firmly on the door until it clicks and latch is engaged.

## Removing the hard drive

 - 1. Push the latch button down.
- 2. Pull the door open and away from the computer to expose the hard drive compartment
- **3.** To remove the hard drive:
  - a. Push and hold the hard drive release button to the left while pulling on the plastic hard drive tab.



## Installing the hard drive

- 1. Push the hard drive into its compartment until it snaps in place.
- 2. Press firmly on the door until it clicks and latch is engaged.

## Working on your computer

This section provides information about the backlit keyboard, stealth mode, function keys and converting your computer to notebook and tablet modes (if applicable).

## Using the backlit keyboard

The Latitude rugged series comes equipped with a backlit keyboard that can be customized. The following colors are enabled:


- 1. White
- 2. Red
- 3. Green
- 4. Blue

Alternatively, the system can be configured with two additional custom colors in the System Setup (BIOS).

#### Turning the keyboard backlight on/off or adjusting brightness

To turn the backlight on/off or adjust the backlight brightness settings:


- 1. To initialize the keyboard backlight switch, press Fn+F10 (the Fn key is not needed if function key Fn lock is enabled).
- 2. The first use of the preceding key combination turns on the backlight to its lowest setting.
- 3. Repeated pressing of the key combinations cycles the brightness settings through 25 percent, 50 percent, 75 percent and 100 percent.
- 4. Cycle through the key combination to either adjust the brightness or turn off the keyboard backlight.

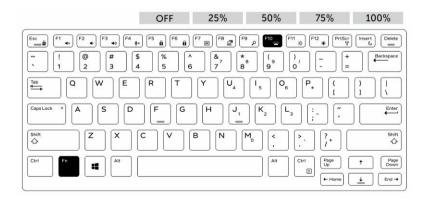

#### Changing the keyboard backlight color

To change the keyboard backlight color:

- 1. Press Fn+C keys to cycle through the available backlight colors.
- 2. White, Red, Green and Blue are active by default; up to two custom colors can be added to the cycle in the System Setup (BIOS).

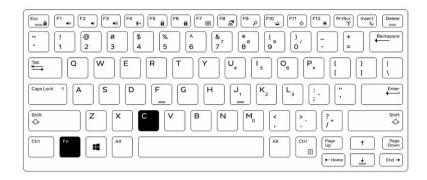

#### Customizing the backlit keyboard in System Setup (BIOS)

- 1. Turn off the computer.
- 2. Turn on the computer and at the Dell logo, tap the F2 key repeatedly to bring up the System Setup menu
- **3.** Under **System Configuration** menu, select **RGB Keyboard Backlight**..

  You can enable/disable the standard colors (White. Red. Green and Blue).
- **4.** To set a custom RGB value, use the input boxes on the right side of the screen.
- 5. Click Apply changes and click Exit to close System Setup.

## Function Fn key lock features

**NOTE:** The keyboard has Function key Fn lock capability. When activated, the secondary functions on the top row of keys become default and will not require use of the Fn key.

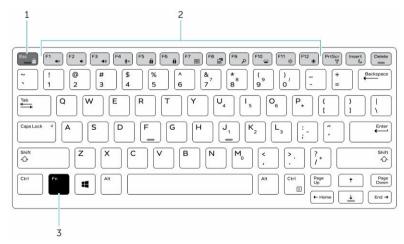


Figure 6. Fn key callouts

- 1. Fn lock key
- 2. Affected Fn keys


3. Fn key



**NOTE:** Fn lock affects only the above keys (F1 to F12). Secondary functions will not require the Fn key to be pressed while enabled.

#### **Enabling the Function (Fn) lock**

 1. Press the Fn+Esc keys.



**2.** Press the Fn+Esc keys again to deactivate the function lock feature. The function keys return to the default actions.

#### Stealth mode


Latitude rugged products come equipped with a stealth mode feature. Stealth mode allows you to turn off the display, all the LED lights, internal speakers, the fan and all wireless radios with a single key combination.



**NOTE:** This mode is aimed at using the computer in covert operations. When the stealth mode is enabled, the computer remains functional but does not emit any light or sound.

#### Turning stealth mode on/off

- 1. Press the Fn+F7 key combination (Fn key not needed if Fn lock is enabled) to turn on stealth mode.
  - **NOTE:** Stealth mode is a secondary function of the F7 key. The key can be used to perform other functions on the computer when not used with the Fn key to enable stealth mode.
- 2. All the lights and sounds are turned off.
- **3.** Press the Fn+F7 key combination again to turn off the stealth mode.

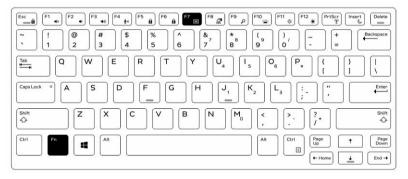


#### Disabling stealth mode in the system setup (BIOS)

- **1.** Power off the computer.
- 2. Power on the computer and at the Dell logo, tap the F2 key repeatedly to bring up the **System Setup** menu.
- 3. Expand and open the **System Configuration** menu.
- 4. Select Stealth Mode Control.

- **NOTE:** Stealth mode is enabled by default.
- 5. To disable stealth mode uncheck the **Enable Stealth Mode** option.
- 6. Click Apply changes and click Exit.

## Enabling and disabling the wireless (WiFi) feature

- **1.** To enable wireless Networking, press Fn + PrtScr.
- 2. Press Fn + PrtScr again to disable wireless Networking.

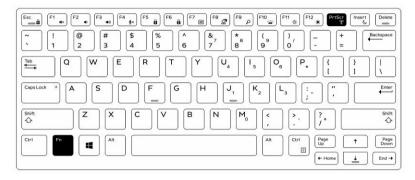

## **Smart cards**

There are two main types of Smart or Common Access Cards (CAC):

- 1. Enclosed Smart Cards These cards have a contact area with many gold plated connection pads. When inserted into a card reader, the information from the chip can be read and written.
  - Insert the card into the smart card slot with the gold contact pad facing upward and pointing toward the smart card slot. Slide the card into the slot until it is fully seated in its connector.
- 2. Contactless Smart Cards These cards do not require any physical contact with the reader. The chip communicates with the card reader through RFID induction technology.

These cards require only close proximity to an antenna of a card reader to complete transactions.

## **Technical specifications**



**NOTE:** Offerings may vary by region. For more information regarding the configuration of your computer in:

- Windows 10, click or tap **Start**  $\rightarrow$  **Settings**  $\rightarrow$  **System**  $\rightarrow$  **About**.
- Windows 8.1 and Windows 8, click or tap Start
   → PC Settings → PC and devices → PC
- Windows 7, click Start , right-click My Computer, and then select Properties.

## System information specifications

Feature Specification

DRAM bus width 64 bit

Flash EPROM SPI 128 Mbits

PCle 3.0 bus 8.0 GHz

### **Processor specifications**

Feature Specification

Types Intel Core i3/i5/i7 series

L3 cache up to 4 MB External bus 2133 MHz

frequency

### **Memory specifications**

Feature Specification

**Memory** Two SODIMM slots

connector

Memory capacity 4 GB, 8 GB, and 16 GB

Memory type DDR4 SDRAM

Speed 2133 MHz

Minimum memory 4 GB

Maximum memory 32 GB

## **Battery specifications**

Feature Specification

Type 6-cell or 9-cell smart lithium ion

Depth 80 mm (3.14 inches)

Height 21 mm (0.82 inches)

Width 166.9 mm (6.57 inches)

Weight

6- cell: 365.5 g (0.80 lb)
9- cell: 520 g (1.14 lb)

Voltage 14.8 V DC

**Life span** 300 discharge per charge cycles

Temperature range

Operating

Charging: 0°C to 60°C (32°F to 140°F)

• Discharging: 0°C to 70°C (32°F to 158°F)

Nonoperating - 51°C to 71°C (- 60°F to 160°F)

**NOTE:** The battery pack is capable of safely withstanding the above storage

temperatures with 100% charge.

NOTE: The battery pack is also capable of withstanding storage temperatures

from -20°C to +60°C with no degradation in its performance.

Coin cell battery 3 V CR2032 lithium coin cell

## **Audio specifications**

Feature Specification

**Type** four channel high definition audio

Controller HDA Codec - ALC3235

Stereo conversion 24 bit (analog-to-digital and digital-to-analog)

Interface (internal) HD audio

Interface (external) microphone in/stereo headphones/external speakers connector

**Speakers** one mono speaker

Internal speaker

amplifier

2 W (RMS)

**Volume controls** Volume up/Volume down buttons

 $\triangle$ 

CAUTION: Adjustment of volume control, as well as the equalizer in the operating system and/or equalizer software, to other settings than the center position may increase the earphones and/or headphones output and cause hearing damage or loss.

### Video specifications

Feature Specification

Type integrated on system board

Controller (UMA)

Intel core

A) Intel HD Graphics 520

i3/i5/i7

Discrete AMD Radeon R7 M360 discrete graphics card

## **Communication specifications**

Feature Specification

Network adapter 10/100/1000 Mb/s Ethernet (RJ-45)

Wireless

• WLAN with Bluetooth 4.1 enabled

WWAN

## Port and connector specifications

Feature Specification

Audio one microphone/stereo headphone/speakers connector

Video

one 19-pin HDMI portone 15-pin VGA port

**Network adapter** two RJ-45 connectors

**Serial port** two DB9 pin serial ports

Docking port one

**USB** ports

• one 4-pin USB 2.0-compliant port

• one 9-pin USB 3.0-compliant port with PowerShare

• two 9-pin USB 3.0-compliant ports

SIM card slot one micro-SIM slot with security feature

## **Display specifications**

Feature Specification

Type WLED display

Size 14.0 inches

 Height
 190.00 mm (7.48 inches)

 Width
 323.5 mm (12.59 inches)

 Diagonal
 375.2 mm (14.77 inches)

 Active area (X/Y)
 309.4 mm x 173.95 mm

Maximum resolution

1366 x 768 pixels

D. Guarda and a

**Refresh rate** 60 Hz

Operating angle 0° (closed) to 180°

Maximum viewing

+/- 70° minimum for HD

angles (horizontal)

Maximum viewing

+/- 70° minimum for HD

angles (vertical)

Pixel pitch 0.1875 mm

## **Touchpad specifications**

Feature Specification

Active Area:

**X-axis** 99.50 mm **Y-axis** 53.00 mm

## **Keyboard specifications**

**Feature** Specification

Number of keys

83 keys: US English, Thai, French-Canadian, Korean, Russian, Hebrew, English-

84 keys: UK English, French Canadian Quebec, German, French, Spanish (Latin America), Nordic, Arabic, Canada Bilingual

85 keys: Brazilian Portuguese

87 keys: Japanese

Layout QWERTY/AZERTY/Kanji

### **Adapter specifications**

**Feature** Specification Type 65 W and 90 W 100-240 V AC Input voltage

Input current

(maximum)

65 W - 1.5 A

• 90 W − 1.7 A

Input frequency 50-60 Hz

Output current

• 65 W − 3.34 A

• 90 W - 4.62 A

Rated output

19.5 V DC

voltage

Temperature range 0°C to 40°C (32°F to 104°F)

(operating)

(nonoperating)

Temperature range -40°C to 70°C (-40°F to 158°F)

## Physical dimension specifications

**Feature** Specification Height 44.4 mm (1.75 inches) Width 243 mm (9.56 inches) 347 mm (13.66 inches) Length

Weight (minimum

config)

6.55 lbs (2.95 kg)

## **Environmental specifications**

Feature Specifications

Temperature — operating

-29°C to 60°C (-20°F to 140°F)

Temperature –

-51°C to 71°C (-60°F to 160°F)

storage

Relative humidity 10 % to 90 % (non-condensing)

(maximum) — operating

ity 0 % to 95 % (non-condensing)

Relative humidity (maximum) — storage

e

Altitude (maximum) operating

maximum) —

Altitude (maximum) nonoperating -15.24 m to 9144 m (-50 ft to 30,000 ft)

-15.24 m to 4572 (-50 ft to 15,000 ft)

Airborne

G1 as defined by ISA-71.04-1985

contaminant level

## **Contacting Dell**

NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1. Go to Dell.com/support.
- 2. Select your support category.
- **3.** Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
- **4.** Select the appropriate service or support link based on your need.