

Mobile Printer
SM-L300 SERIES

Hardware Manual



Federal Communications Commission
Radio Frequency Interference Statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For compliance with the Federal Noise Interference Standard, this equipment requires a shielded cable. For RF interference suppression, if a ferrite core is provided with this device, affix it to the interface cable.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The above statement applies only to equipments marketed in U.S.A.

CAN ICES-3 (B) / NMB-3 (B)

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles des radioélectriques (RF) de la FCC lignes directrices d'exposition dans le Supplément C à OET65 et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée. Cependant, cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles)

English:	Hereby, STAR MICRONICS CO.,LTD. declares that this Wireless Device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Deutsch: [German]	Hiermit erklärt STAR MICRONICS CO.,LTD., dass sich das Gerät Wireless Device in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Svenska: [Swedish]	Härmed intygar STAR MICRONICS CO.,LTD. att denna Wireless Device står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Español: [Spanish]	Por medio de la presente STAR MICRONICS CO.,LTD. declara que el Wireless Device cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Português: [Portuguese]	STAR MICRONICS CO.,LTD. declara que este Wireless Device está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Français: [French]	Par la présente STAR MICRONICS CO.,LTD. déclare que l'appareil Wireless Device est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Suomi: [Finnish]	STAR MICRONICS CO.,LTD. vakuuttaa täten että Wireless Device tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Italiano: [Italian]	Con la presente STAR MICRONICS CO.,LTD. dichiara che questo Wireless Device è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Dansk: [Danish]	Undertegnede STAR MICRONICS CO.,LTD. erklærer herved, at følgende udstyr Wireless Device overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Nederlands: [Dutch]	Hierbij verklaart STAR MICRONICS CO.,LTD. dat het toestel Wireless Device in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Eesti: [Estonian]	Käesolevaga kinnitab STAR MICRONICS CO.,LTD. seadme Wireless Device vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Ελληνική: [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ STAR MICRONICS CO.,LTD. ΔΗΛΩΝΕΙ ΟΤΙ Wireless Device ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.
Slovensky: [Slovak]	STAR MICRONICS CO.,LTD. týmto vyhlasuje, že Wireless Device spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Slovensko: [Slovenian]	STAR MICRONICS CO.,LTD. izjavlja, da je ta Wireless Device v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Česky: [Czech]	STAR MICRONICS CO.,LTD. tímto prohlašuje, že tento Wireless Device je ve shodě se základními požadavky a dalšími příslušnými ustanoveními smernice 1999/5/ES.
Magyar: [Hungarian]	Alulírott, STAR MICRONICS CO.,LTD. nyilatkozom, hogy a Wireless Device megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EK irányelv egyéb előírásainak.
Български: [Bulgarian]	това Безжично устройство е в съответствие със задължителните изисквания и другите приложими разпоредби на Директива 1999/5/EO.
Polski: [Polish]	Niniejszym STAR MICRONICS CO.,LTD. oświadcza, że Wireless Device jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/WE.
Malti: [Maltese]	Hawnhekk, STAR MICRONICS CO.,LTD., jiddikjara li dan Wireless Device jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/KE.
Latviski: [Latvian]	Ar šo STAR MICRONICS CO.,LTD. deklarē, ka Wireless Device atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių : [Lithuanian]	Šiuo STAR MICRONICS CO.,LTD. deklaruoja, kad šis Wireless Device atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Norsk: [Norwegian]	STAR MICRONICS CO.,LTD. erklærer herved at utstyret Wireless Device er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Română : [Romanian]	Prin prezenta STAR MICRONICS CO., LTD. declară că acest dispozitiv este conform cu cerințele esențiale și alte prevederi relevante ale directivei 1999/5/CE.
Hrvatski : [Croatian]	Ovime Star Micronics CO., LTD. Izjavljuje da je bežični uređaj u skladu s osnovnim zahtjevima i drugim važnim odredbama direktive 1999/5/EZ.
Italia:	l'uso pubblico è soggetto ad autorizzazione generale da parte del rispettivo provider di servizi.
Norge:	Dette avsnittet gjelder ikke det geografiske området innenfor en radius på 20 km fra sentrum av Ny-Ålesund.

This statement will be applied only for the printers marketed in Europe.



STAR MICRONICS CO.,LTD. Head Office
20-10 Nakayoshida, Suruga-ku, Shizuoka-shi, Shizuoka, 422-8654, Japan
Tel. + 81-54-263-1111 Fax. + 81-54-263-1057

STAR Quality Technical Center
18-12 Nakayoshida, Suruga-ku, Shizuoka-shi, Shizuoka, 422-8001, Japan
Tel. + 81-54-263-1303 Fax. + 81-54-263-6650

Declaration of Conformity

We declare, under our solo responsibility, that the product to which this declaration relates complies with the provisions of following European Directives:

1999/5/EC

2011/65/EU , 2015/863

harmonised standard

RADIO : **EN 300 328 V1.9.1**
EMC : **EN 301 489-1 V1.9.2**
EN 301 489-17 V2.2.1
EN 55032 : 2012 / AC:2013 Class B
(Comments: EN 55032:2012 is included in EN 55032:2015.)
EN 61000-3-2 : 2014
EN 61000-3-3 : 2013
EN 55024 : 2010
SAFETY : **EN 60950-1 : 2006 +A11:2009 +A1:2010 +A12:2011 +A2:2013**
EN 62311 : 2008
ENVIRONMENT: **EN 50581 : 2012**

Manufacturer's Name **Star Micronics Co.,Ltd.**
Manufacturer's Address **20-10 Nakayoshida, Suruga-ku, Shizuoka-shi,
Shizuoka 422-8654 Japan**

Importer's Name **Star Micronics Europe Ltd.**
Importer's Address **Star House, Peregrine Business Park, Gomm Road,
High Wycombe, Bucks. HP13 7DL, U.K.**

Type of Equipment **Thermal Printer**
Model Name **SM-L300 , SM-L304**
Ref. Radio Report No. **17070105-CE-R1 , 17070105-CE-R2**
Ref. EMC Report No. **17070105-CE-E1 , 17070105-CE-E2**
Ref. Safety Cert. No. **17070105-CE-H , 17070105-CE-S**
Ref. Environ. Report No. **SM-L300-RoHS-01**

Place High Wycombe - U.K. D. Pearce (Signature)

Date 27-03-2017 David Pearce (Full Name)

Year of 1st CE mark '17 Technical Director (Position)

Trademark acknowledgments

SM-L300: Star Micronics Co., Ltd.

Notice

- All rights reserved. Reproduction of any part of this manual in any form whatsoever, without STAR's express permission is forbidden.
- The contents of this manual are subject to change without notice.
- All efforts have been made to ensure the accuracy of the contents of this manual at the time of going to press. However, should any errors be detected, STAR would greatly appreciate being informed of them.
- The above notwithstanding, STAR can assume no responsibility for any errors in this manual.
- iPad, iPhone, iPod, iPod touch, and Retina are trademarks of Apple Inc., registered in the U.S. and other countries. iPad Air, iPad mini, and Lightning are trademarks of Apple Inc.
IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Android is a trademark of Google Inc.
- Windows is registered trademarks of Microsoft Corporation.
- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.

Caution Symbol



This symbol is placed near the thermal head to indicate that it may be hot.

Never touch the thermal head immediately after the printer has been used. Let the thermal head cool for a few minutes before touching it.



This symbol is placed near the thermal head to indicate that it is easily damaged.

Observe the precautions for handling electrostatic sensitive devices.

Safety Precautions

Please be sure to read

To use this product in safety, please follow the precautions given below.

WARNING

- ✓ If you notice smoke, a strange smell, or a strange sound, turn off the power immediately, and remove the USB cable and/or battery pack. Then contact the dealer.
 - ✓ If any foreign material (metal scraps, water, or other fluid) enters the printer, immediately turn off the printer and remove the USB cable and/or battery pack. Then, contact your dealer for advice. Continued use of the printer could result in a fire.
 - ✓ Never attempt to repair the printer yourself. Also do not disassemble or modify the product. Doing so could lead to injury, fire, or electric shock.
 - ✓ Do not touch the tear bar.
 - There is a tear bar inside the paper outlet slot. Neither put your hand in the paper outlet slot while printing is in progress, or put your hand into the outlet even when printing is not in progress.
 - The printer cover can be opened when replacing the paper. However, since the tear bar is on the inside of the printer cover, be careful not to place your face or hands too close to the tear bar.
 - ✓ During and immediately after printing, the area around the thermal head is very hot. Do not touch it, as you could be burned.
 - ✓ If any battery fluid gets on your skin or clothing, immediately wash the affected area with fresh water. Otherwise, skin damage may result.
 - ✓ The battery pack may be hot immediately after the product has been used.
-

■ Using the Printer

- ✓ Some semiconductors can be damaged by static electricity. Be sure to turn off the printer when inserting or removing the battery pack.
- ✓ Do not drop the printer or hit it against a hard object.
- ✓ Do not open the printer cover while the printer is printing.
- ✓ Before you open the printer cover, make sure that printing data is not being sent to the printer.
- ✓ Do not unplug or plug in a USB cable while the printer is printing or during communication.
- ✓ Do not touch a USB connector while the printer is printing.
- ✓ Turn off the printer when you are not using it.
- ✓ When the printer is used in a low temperature environment, the battery's performance will be diminished, and the amount of time that you can use the printer for may be reduced.
- ✓ Do not pull out paper while the printer cover is closed.
- ✓ The heating element and the driver IC of the thermal head are easily damaged. Do not touch them with metal objects, sandpaper, etc.
- ✓ Printing quality may suffer if the thermal head heating element becomes soiled by being touched with your hands. Do not touch the thermal head heating element.
- ✓ There is a risk of damage to the driver IC of the thermal head from static electricity.
Never directly touch the IC.
- ✓ Do not operate the printer if there is moisture on the front surface of the head from condensation, etc.
- ✓ Static electricity can cause damage to each sensor.
To protect the sensor from static electricity, do not directly touch it.

■ Thermal Paper Handling

- ✓ Only use thermal paper with the designated specifications. The printing quality and working life of the thermal head cannot be guaranteed if any paper other than that recommended is used. In particular, if ion concentration of $[Na^+, K^+, Cl^-]$ is high, it may drastically reduce the working life of the thermal head. Please exercise caution.
- ✓ Store the thermal paper in a cool, dry, dark location.
- ✓ Do not rub the thermal paper with a hard object.
- ✓ Do not leave the thermal paper in contact with plastic film, an eraser, or adhesive tape for a long period of time.
- ✓ Do not stack the thermal paper on fresh diazo copies or wet-type copies.
- ✓ Do not use chemical glue on the thermal paper.
- ✓ Do not use thermal paper that has been stored for a long period.

■ Operating Environment for the Printer

Before actually unpacking the printer, you should take a few minutes to think about where you plan to use it. Remember the following points when doing this.

- ✓ Do not use the printer in an environment in which it will be subject to strong shaking while it is printing.
- ✓ Be careful to ensure that the printer is not exposed to direct sunlight.
The appropriate environment for using the printer is described below.
Temperature: 0°C to 50°C
Humidity: 20% RH to 85% RH (No condensation)
- ✓ Do not place the printer near a copying machine or other device that produces a strong electro-magnetic field.
- ✓ Keep the printer sufficiently removed from heaters and other sources of heat.
- ✓ Use the printer in a clean, low-humidity environment that is free from dust.
- ✓ Avoid using the printer in high-humidity rooms.

■ Printer Maintenance

Please perform the following maintenance every 6 months.

- ✓ Thermal head
Dip a cotton swab in an alcohol solvent (ethanol, methanol, or isopropyl alcohol), and clean the heating area of the head.
- ✓ Platen
While turning the platen, use a soft dry cloth to lightly rub the entire surface of the platen and remove any foreign objects.
- ✓ Paper storage unit, roller, paper path and the surrounding area
Remove any dirt, dust, pieces of paper, etc., from the paper storage unit.
- ✓ Card reader
Regularly blow air onto the card reader to remove any dust from the card slot.

■ Maintenance for using Linerless Label Paper

Perform cleaning regularly so that the printer can be used safely and comfortably. (Every time when a paper roll is ended.)

- ✓ Cleaning points are as above except Card reader. (Thermal head, Platen, Paper storage unit, roller, paper path and the surrounding area)

Remove any dirt, dust, pieces of paper and glue etc.

■ Using a Magnetic Card

- ✓ Do not bring magnets near the card, and do not store the card near a device that produces a magnetic field (such as a mobile phone, speaker, or TV). If you do so, the data on the card may be deleted.
- ✓ Do not leave the card in a high-temperature environment (such as the dashboard of a car). If you do so, the card may bend.
- ✓ Do not touch the card with dirty or wet hands. Also, do not attach adhesive tape or glue to the card. Failing to follow the above precautions could cause the card to stop working properly.

Table of Contents

1. Product Overview	1
1.1 Printer & Accessories	2
1.2 Appearance and Components	3
2. Setup	5
2.1 Battery Pack	5
2.1.1 Inserting into the Printer	5
2.1.2 Charging the Battery	6
2.2 Connecting a tablet or PC to the printer (pairing)	9
2.2.1 iOS	9
2.2.2 Android	9
2.2.3 Windows10	10
2.3 Loading Paper	11
2.3.1 De-curl Setting	11
2.3.2 Paper Guide Adjustment	13
2.3.3 Loading Paper to the Printer	15
2.3.4 Automatic Adjustment of Label Gap Sensor	16
2.4 Belt Clip	18
2.4.1 Attaching to the Printer	18
2.4.2 Using the Belt Clip	18
3. Control Panel & Buzzer	19
3.1 Button	19
3.2 LED & LCD Display / Error	20
3.2.1 LED & LCD Display	20
3.2.2 LED & LCD Display for Error	24
3.3 Self Test	26
3.3.1 Self Test Procedure	26
3.3.2 Printing the Bluetooth Device Name and MAC Address	26
3.4 Memory Switch Settings (Using Buttons On the Printer)	27
3.5 Hex Dump Mode	36
3.6 Instruction for Power Management	37
3.6.1 Standby Time	37
3.6.2 Auto-Off Time	37
3.6.3 Smart Power Option	37
3.7 Paper Type	39
3.8 Black Mark Sensor	39
3.9 Printable Area	40
4. Magnetic Card Reader (For MSR model)	41

5. Paper	43
5.1 Paper Specification	43
5.1.1 Receipt (thermal) Paper	43
5.1.2 Label Paper	44
5.1.3 Linerless Label Paper	45
5.2 Printable Area	47
5.2.1 Receipt (thermal) Paper	47
5.2.2 Label Paper	49
5.2.3 Linerless Label Paper	50
5.3 Specification of Black Mark	51
5.3.1 Receipt(thermal) Paper	51
5.3.2 Label Paper	52
5.4 Specifications of Label Paper.....	53
6. General Specification.....	54
7. Revision History.....	58

This manual supports the following firmware version.

Firmware Version	Ver.1.0
------------------	---------

Refer to the appropriate manual which supports the firmware version of you printer.

The firmware version can be confirmed by the self-test. (Refer to 3.3 Self-test)

1. Product Overview

This printer is perfect for mobile banking systems, retail, POS (point of sale) terminals and other forms of mobile computing.


The characteristics of this printer are listed below:

- Support Label Paper and Linerless Label Paper
- Support to switch the de-curl function when receipt is used.
- Adjustable range of Roll Paper Width : 40 to 80mm
- Very silent printing direct thermal printing method
- Print maximum speed 65mm/s (Paper feed maximum speed 65mm/s)
- Support Bluetooth Ver3.0/4.0[BLE] Dual Mode
- Support Secure Magnetic Stripe Reader <Model with Card Reader>
 - *AES or 3DES encryption
 - *DUKPT Key Management
- Support Graphic LCD(128x64 dots) with Blue Backlight
- Belt Clip as a standard accessory
- Support text, barcode and graphic printing
- Drop-in design that makes it easy to load paper
- This printer is supported with the printer cover open sensor, paper end sensor, black mark sensor, transmissive sensor(gap sensor), thermal head thermistor and printer internal thermistor.


1.1 Printer & Accessories

The printer is packaged with the following accessories.


If any of these accessories is broken or missing, please contact the dealer that you bought the product.

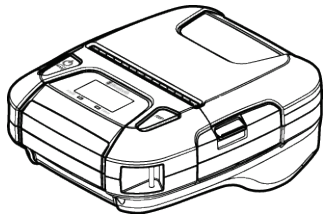


Printer

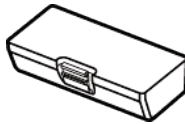


Battery Pack

 


Sample Roll Paper

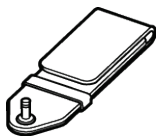

Belt Clip

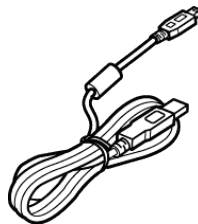


USB Cable

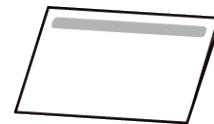


Easy Setup Guide



 Ferrite Core




Ferrite Core Instruction Sheet

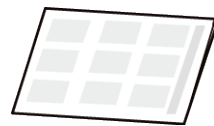


Safety Instruction Sheet


► The optional items for this printer are listed below.

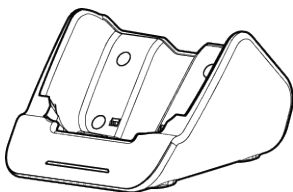

Charging Cradle

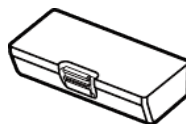


Battery Pack

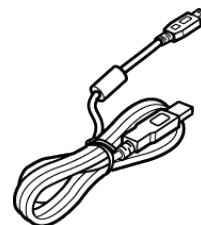




USB Cable

1.2 Appearance and Components

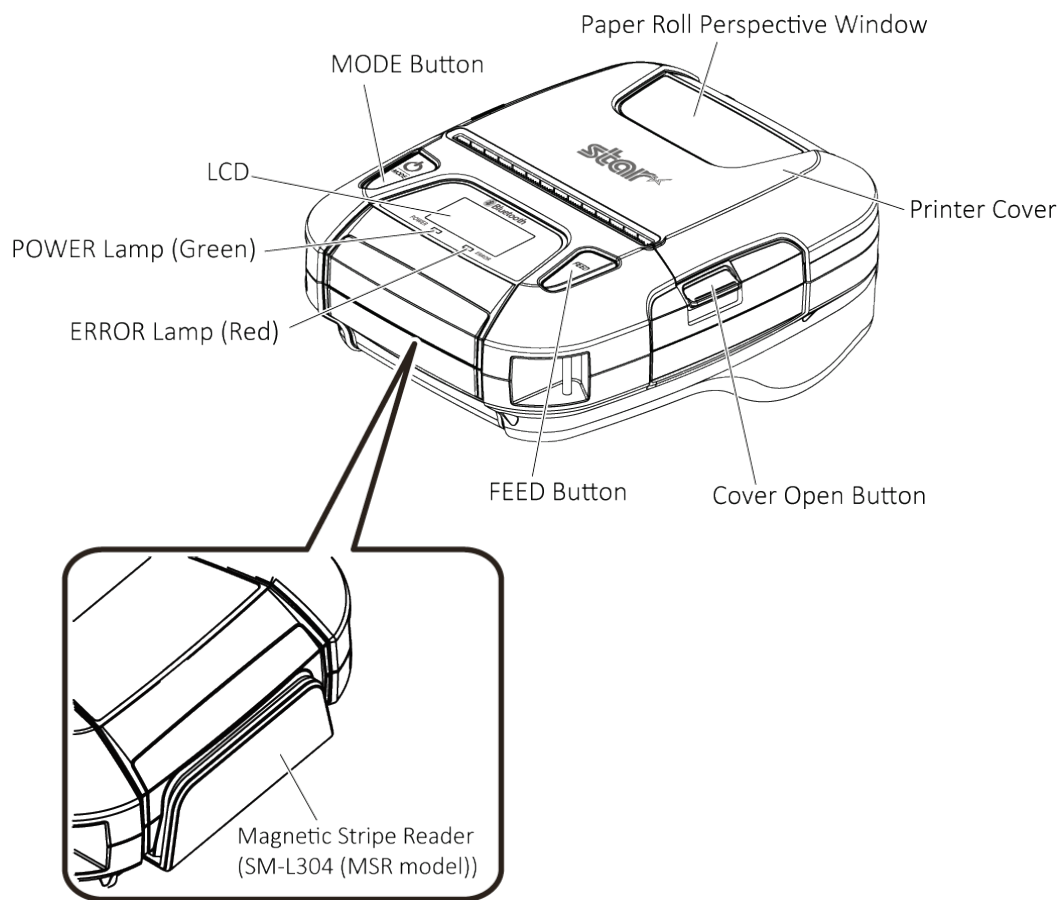

NOTE: Only SM-L304 MSR model has the Magnetic Stripe Reader.

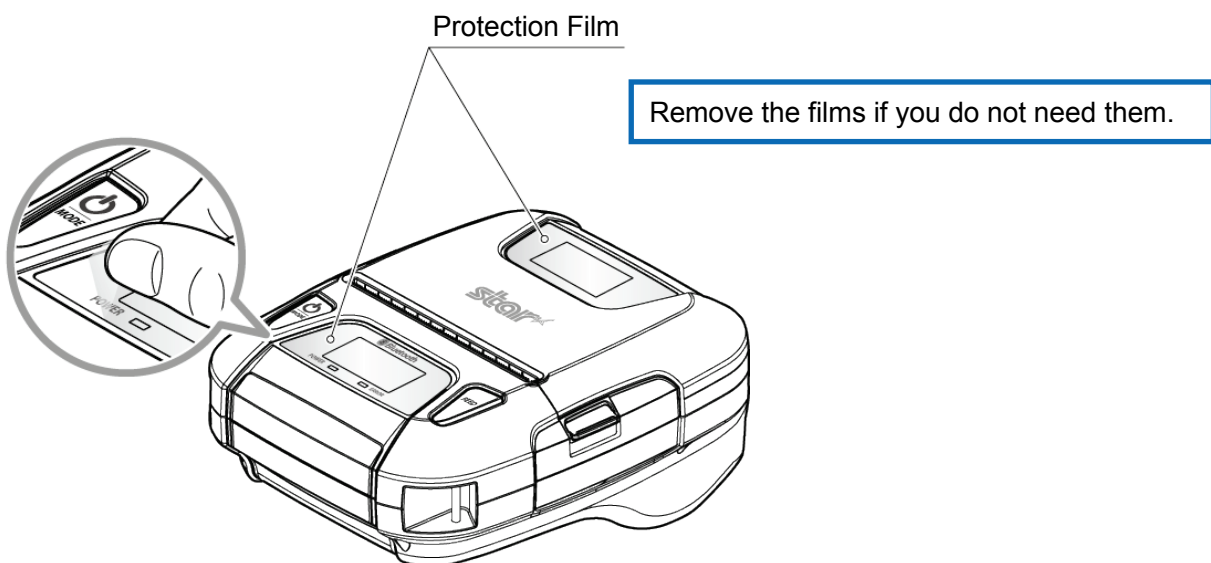

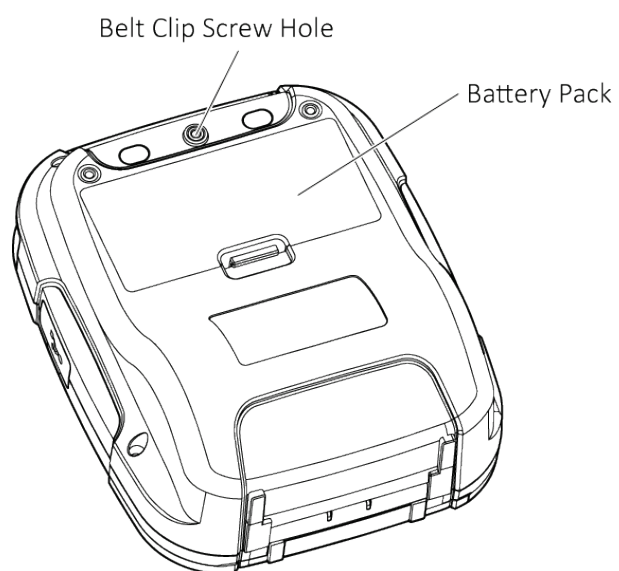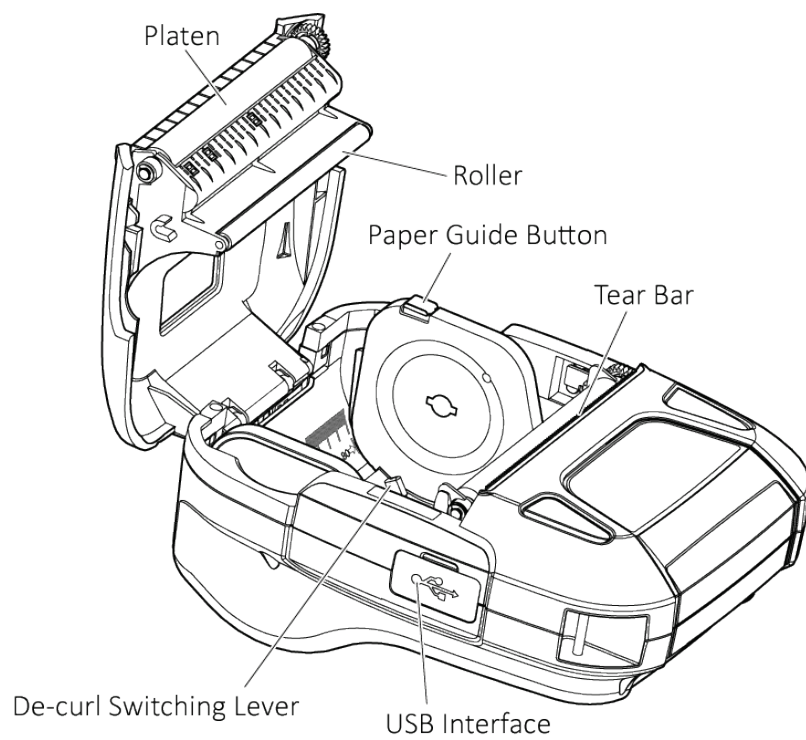


2. Setup

2.1 Battery Pack

2.1.1 Inserting into the Printer

1. Make sure that the printer has been turned off before you insert or remove the battery pack.
2. Insert the battery pack into the back of the printer as in the figure shown below, following the direction of the arrow.

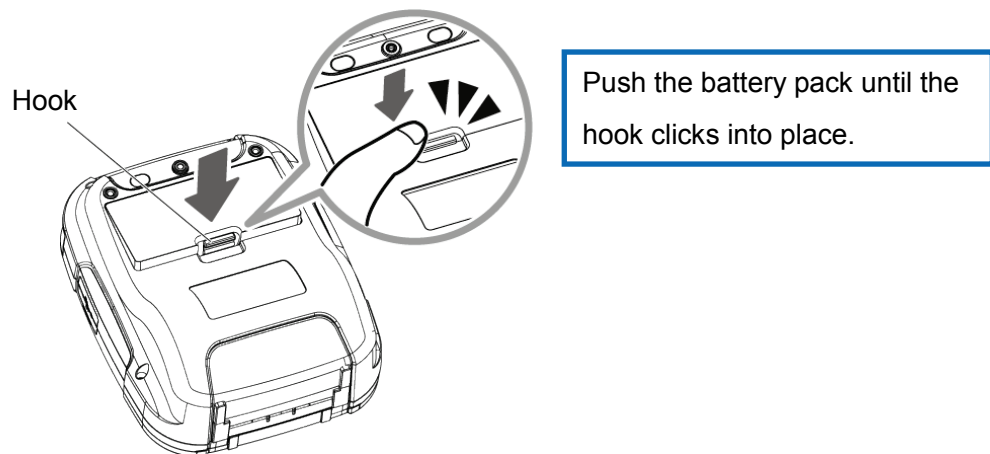


3. To remove the battery back, pull back the hook, and use the opposite procedure from the one you used to insert the battery pack.

2.1.2 Charging the Battery

Insert the battery pack into the printer to charge it.

Plug in socket with USB charging.

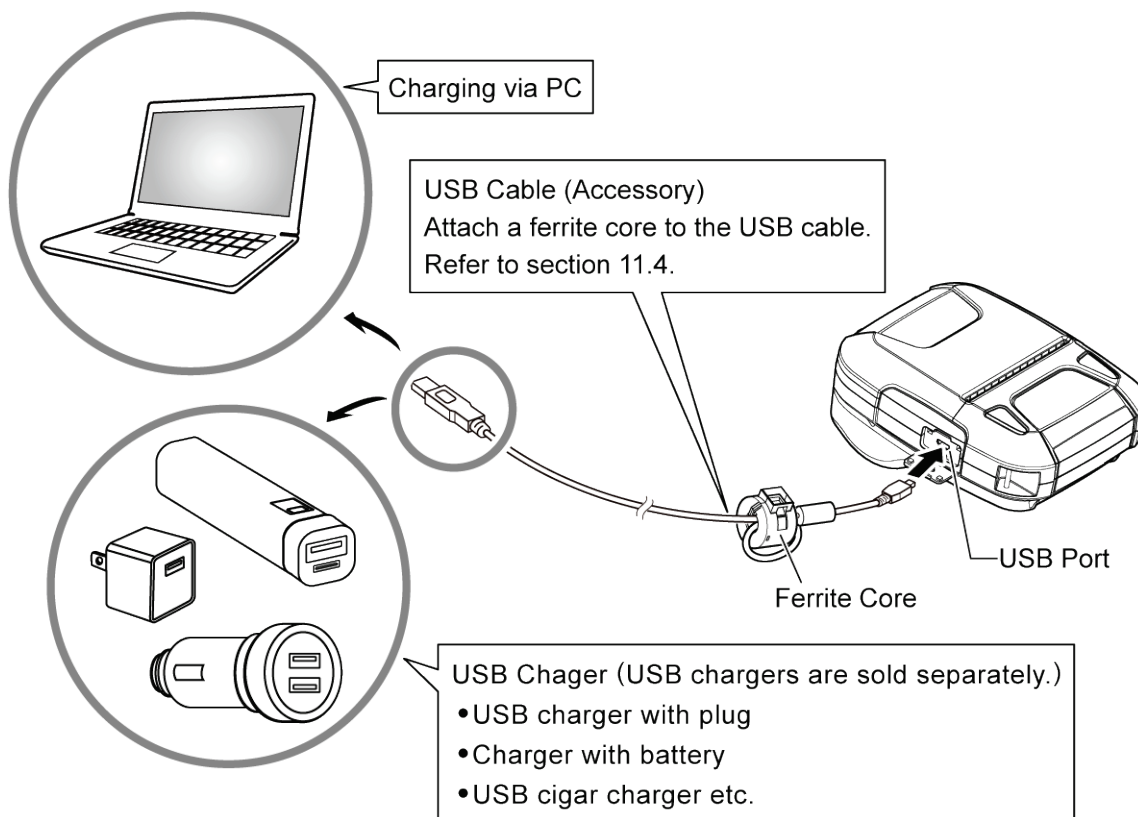

When battery pack runs out of power, the battery icon will flash. It powers off automatically when continues printing. If you want to go on, please recharge it.

Battery charging status descriptions are as follows.

Printer status	While Charging	Charging is completed
When power ON	Power lamp is Flashing in green	Power lamp is constant on *But if printer goes into Stand-by mode, power lamp will keep flash 1 time/second.
When power OFF	Power lamp is Flashing in green	Power lamp is constant on

NOTE: However, a low-grade car charger may cause a trouble due to a sudden change of voltage.
Use the charger that satisfies the USB standard.



Notes about the Battery Pack

► **General Battery Characteristics**

- The battery is a consumable and its performance over time gradually decreases.
- While not in use of printer, the battery will slowly discharge itself.
- Prepare a battery pack that has been charged relatively recently (1 to 2 days earlier).
- To ensure that the battery lasts for a long time, we recommend that you turn off the printer whenever possible.
- When used at low temperatures, battery performance will temporarily decline. Be sure to have a fully-charged spare battery standing by if the printer will operate in a cold environment.

► **Charging the Battery Pack**

- The battery pack can be charged at ambient temperatures between 0°C and 45°C (0 - 10°C : Max. 0.5 A (Recommendation)). When the printer is used in a low temperature environment (less than 10 degrees), the battery's performance will be diminished, and the amount of time that you can use the printer for may be reduced.
- The time required to charge the battery pack varies depending on the residual amount of battery, electrical current and the ambient temperature. Normally, it takes around 5 hours to charge the battery pack.
- It will take longer to charge the battery from the PC than by the USB charger supports 1.0A.
- It will take longer to charge the battery pack if it is printing while charging or power on.
- Do not remove the battery pack while it is being charged.
- Fully charge the battery prior to using the printer.
- There is no need to completely discharge or use up a rechargeable Lithium-ion battery before recharge it.
- It is normal for the battery pack to be hot after it has finished charging or been used.
- Do not recharge a battery pack that has just been fully charged.

► **Battery Pack Life**

- The battery can be charged approximately 300 times in the normal temperature range without losing performance. If an extreme decline in the running time of the battery is noticed, the battery is reaching the end of its usable life. It is recommended to replace the old battery with a new one.

► **Notes about Using the Battery Pack**

- Only use a designated battery pack.
- Only use the designated battery charging method.
- You cannot use a USB cable other than the designated USB cable.
- Do not throw the battery into a fire, place it near a flame or heating device, or leave it in a hot environment (under direct sunlight, in a car, etc.).
- Do not use a battery pack that has been dropped or subjected to a shock in some other way.

- Do not disassemble or modify the battery pack.
- Do not short the terminals of the battery pack or get it wet.
- Do not place the battery pack in a bag with a small metal object (such as a key).
- If any battery fluid gets on your skin or clothing, immediately wash the affected area with fresh water. Otherwise, skin damage may result.

► Notes about Storing the Battery Pack

- The characteristics of the battery pack may degrade if you store it in a full-charged state for a long period of time. If you do not intend to use the battery pack for a while, store it in approx. 50%-charged state.
- If you do not intend to use the battery pack for a long time, be sure to remove it from the printer.
- Keep the battery out of the reach of children. In addition, be careful that children do not remove the battery.
- Store the battery pack in a cool place.

* We recommend that you store the battery pack in a dry area with an ambient temperature of 15 to 25 °C.

* Avoid storing the battery in locations with high or extremely low temperatures.

► Battery Disposal and Recycling

A battery pack is used to power this device. Since the disposal process of batteries varies from country to country, refer to the appropriate measures mandating the disposal method of the country in which this device is used.

To prevent unrecoverable damage to the battery, keep in your mind the following guidelines.

- If the battery pack is not in use for a long time, please remove it after charging up to 50%.
- During storage, please charge the battery pack up to 50% every 3 months.
- When power is low, battery should be charged in time.
- If the printer automatically power down because of low power, be sure to charge the battery in 15 days.

< For U.S.A. and Canada >



Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrc.org/>

2.2 Connecting a tablet or PC to the printer (pairing)

SM-L300 has two Bluetooth modes:

One is Bluetooth 4.0(BLE) without PIN for iOS system.

Another is Bluetooth Ver3.0 with PIN for Android or Windows system. SM-L300 changes the Bluetooth mode automatically by host system.

Pairing sets one by one in order, otherwise it can't figure out which one succeeds in pairing.

The device name displayed during pairing varies depending on the product. It can be checked from the [BD Name] that is printed when printer self-printing is performed (power is turned ON while depressing the FEED button).

PIN and Device name can be changed through Star Utility. (PIN code default : 1234)

To obtain this utility, please contact with your dealer.

2.2.1 iOS


1. Press and hold MODE button for approx. 2 seconds, and printer is turned on.
2. Pairing is not required. Select the model from your application.

Device name: "STAR L300-XXXXX"(default)

(XXXXX is the last five digit number written in the "Serial No." column on the bottom of the printer.)



2.2.2 Android

1. Press and hold MODE button for approx. 2 seconds, and printer is turned on.
2. Open the tablet settings screen and select Bluetooth.

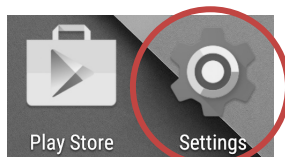


3. Turn ON Bluetooth.

Select the displayed device name (STAR L300-XXXXX), and enter the PIN code.

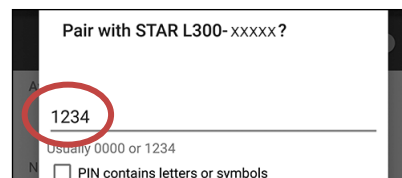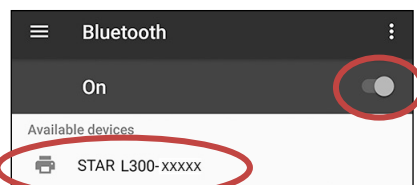


4. When the device name is displayed under "Paired devices", pairing is completed.

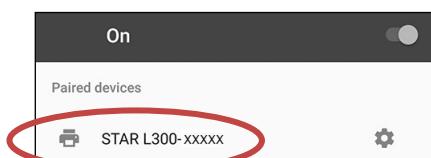


2.2.3 Windows10

1. Press and hold MODE button for approx. 2 seconds, and printer is turned on.
2. Open SETTINGS  , select [Devices] - [Bluetooth].

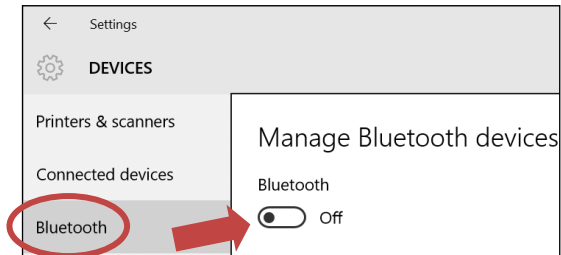

3. Turn ON Bluetooth.

Select the displayed device name (STAR L300-XXXXX), and enter the PIN code.

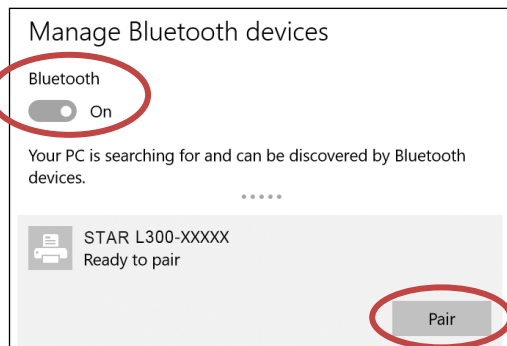

4. When "Connected" is displayed, pairing is completed.



You can test the connectivity with a host device by using Star IO SDK Application which is available on Apple Store and Google play.


2.3 Loading Paper

2.3.1 De-curl Setting


This function makes it possible to correct the curl in the thermal paper roll.

It can set ON or OFF by De-curl Switching Lever. (*Default: OFF)

NOTE: *Be careful not to forcibly pull or push the de-curl mechanism part. The de-curl mechanism part may become damaged if strong force is applied.*


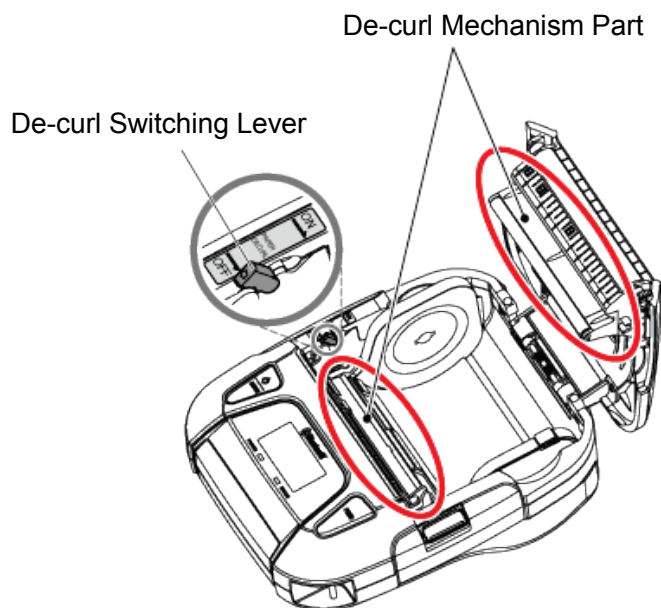


1. Press the cover open button to open the printer cover.

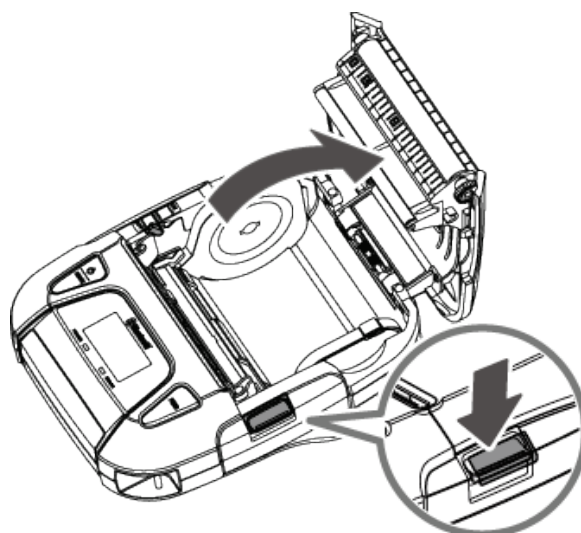



2. The de-curl switching lever is set to OFF by default, and you need to be set to ON if you would like to use this function.

● OFF (default)

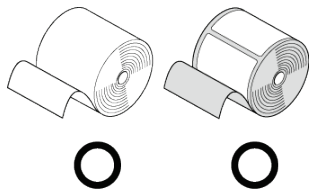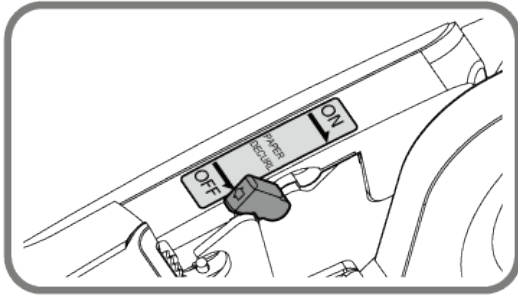

(Receipt paper/Label paper/Linerless label paper)

● ON

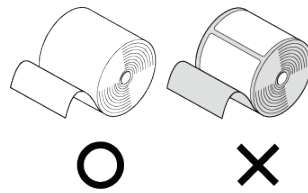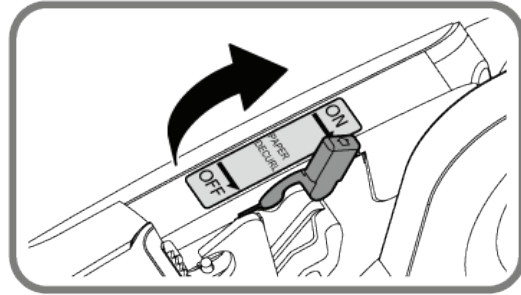


(Receipt paper only)

3. Set the de-curl switching lever to OFF when label paper or linerless label paper is used.


NOTE: If the paper thickness of the receipt is out of specification, it may cause a paper feed failure. In that case, please set the de-curl switching lever to OFF.

2.3.2 Paper Guide Adjustment

Press and hold the paper guide button, push the paper guide so that it can be moved to adjusted to fix the roll paper.

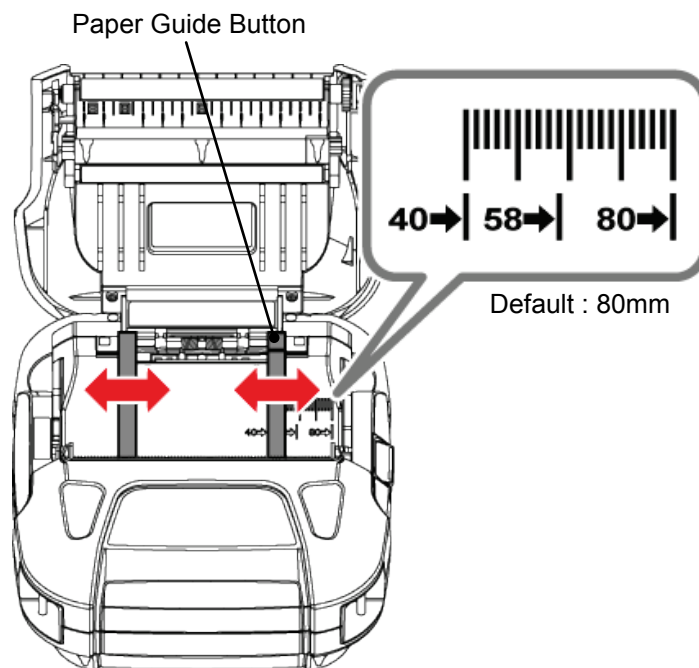

***Example:** When using the 58mm width roll paper, press and hold the paper guide button, push the paper guide to the position of 58 so that it can be fix the 58mm width roll paper.

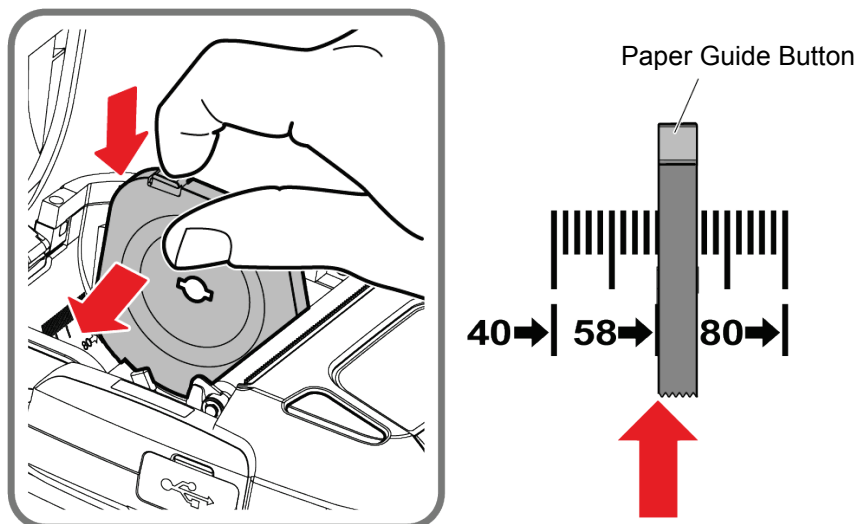

NOTE :


1. ***Please be sure to adjust the paper guide position while pressing the paper guide button.***

Moving the paper guide without pressing the paper guide button may damage it.

2. ***The paper guide position can be adjusted at 2 mm pitch.***

Move the paper guide until it touches the roll paper.

When the paper guide is set in the proper position, the paper roll can be rotated lightly by hand.

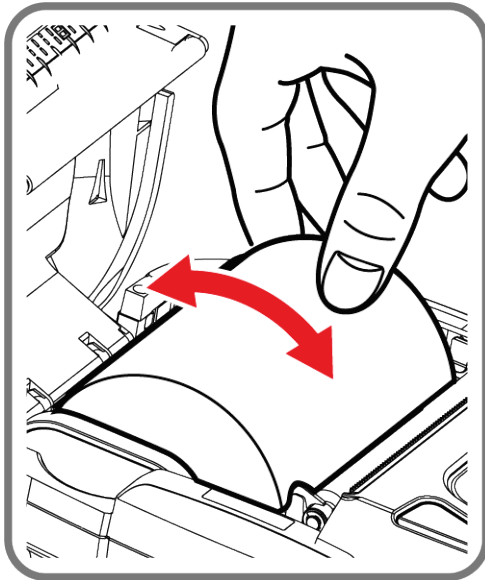


3. ***Do not change the paper width while the printer is in use.***

The amount of wear on the thermal head and rubber roller varies depending on the paper width. This varying amount of wear may cause problems in printing.


2.3.3 Loading Paper to the Printer

Refer to Section 5 “Paper”, to select roll paper that conforms to the specifications.


1. Press the cover open button to open the printer cover.

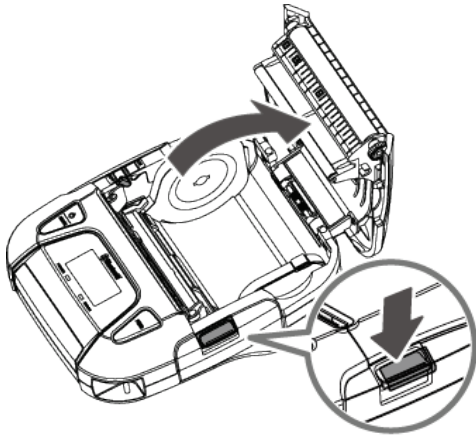

2. Load the roll paper in the orientation shown in the figure below.

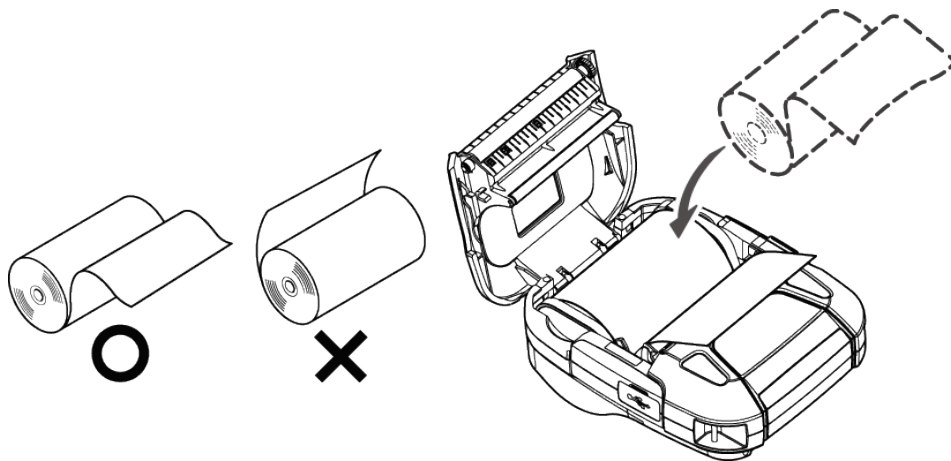

3. Pull the edge of the roll paper straight toward this side. Then press down on both sides of the printer cover to close it firmly. After closing printer cover securely, cut any excess paper.

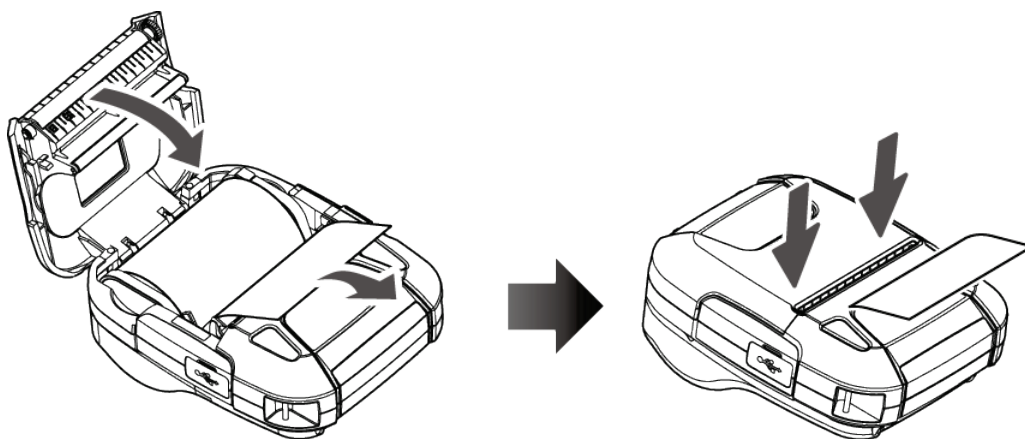

NOTE 1: If the installed roll paper is slackened, folding of right and left ends of paper or a feeding failure may occur. Setting paper guide width too wide for the paper may also cause these problems.

2: To avoid paper jams and other problems, feed the paper at least 1 mm (8 dot lines) before printing.

2.3.4 Automatic Adjustment of Label Gap Sensor

This function is to automatically calibrate the printer setting according to label paper used.

Procedure:

1. Check the paper type if "Label (Gap)" is selected.
*Refer to "3.4 Memory Switch Settings"
2. Turn off the printer.
3. Set a label paper into the printer.
4. Hold the MODE and FEED button for self-printing, and keep holding the buttons until further label paper is fed.
5. Printer automatically calibrates the sensor and indicate the progress on the LCD screen.
6. Done.

CAUTION

When ERROR lamp is flashing, please make sure the cover is closed correctly. If it's not, open the cover and close it correctly.

When the paper is jammed, be sure to open the printer cover before removing the jammed paper.

Do not under any circumstances try to pull out the jammed paper forcefully while the printer cover is closed, doing so may damage parts of the printer.

Caution Symbol



This symbol is placed near the thermal head to indicate that it may be hot. Never touch the thermal head immediately after the printer has been used. Also, even when the thermal head is not hot, do not touch it, because static electricity can damage the devices inside the thermal head.

WARNING

1) Do not touch the tear bar.

- *There is a tear bar inside the paper outlet slot. You could neither put your hand in the paper outlet slot while printing is in progress nor put your hand into the outlet even when printing is not in progress.*
- *The paper cover can be opened when replacing the paper. However, since the tear bar is on the inside of the paper cover, be careful not to place your face or hands too close to the tear bar.*

2) During and immediately after printing, the area around the thermal head is very hot. Do not touch it, as you could be burned.


2.4 Belt Clip

2.4.1 Attaching to the Printer

Follow the procedure below to attach the belt clip to the printer.


1. Make sure that you are attaching the belt clip in the right orientation, then turn the screw that comes with the belt clip into the designated screw hole to attach the belt clip to the printer.

Use a straight slot screw driver to firmly screw in the screw hole.

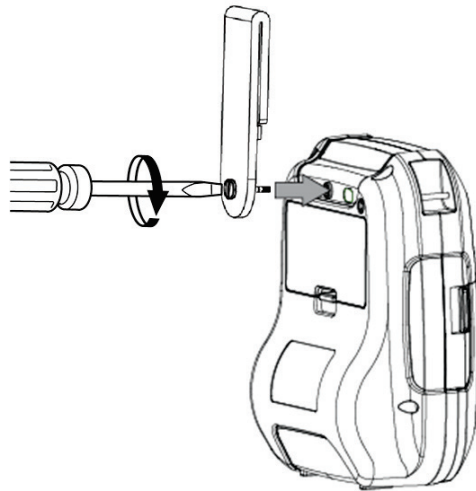

2.4.2 Using the Belt Clip


When the printer is attached to your belt, you can use it like the picture below.

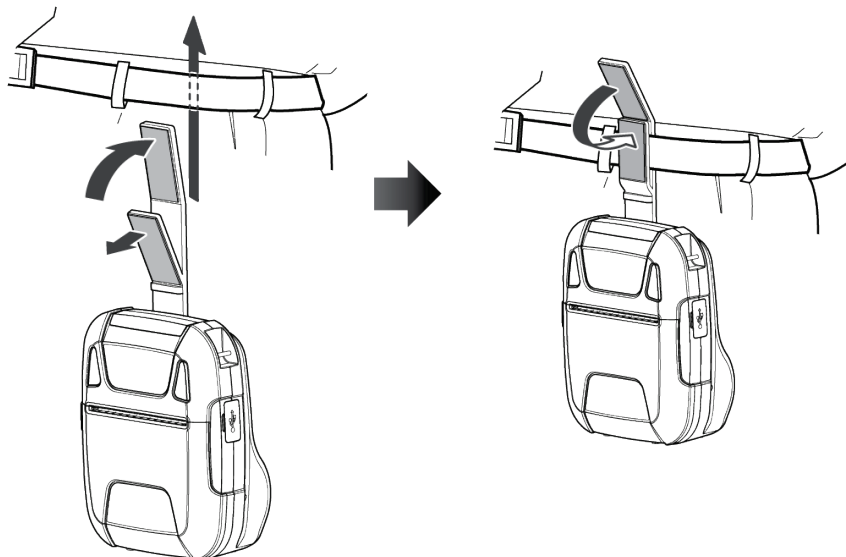

NOTE: Be careful not to drop when use a belt clip. Velcro be securely fixed.

Hold the printer firmly with your hand when you swipe a magnetic stripe card or cut paper. If it is not held firmly, you may fail to read card data or cannot cut paper smoothly with the tear bar.

3. Control Panel & Buzzer

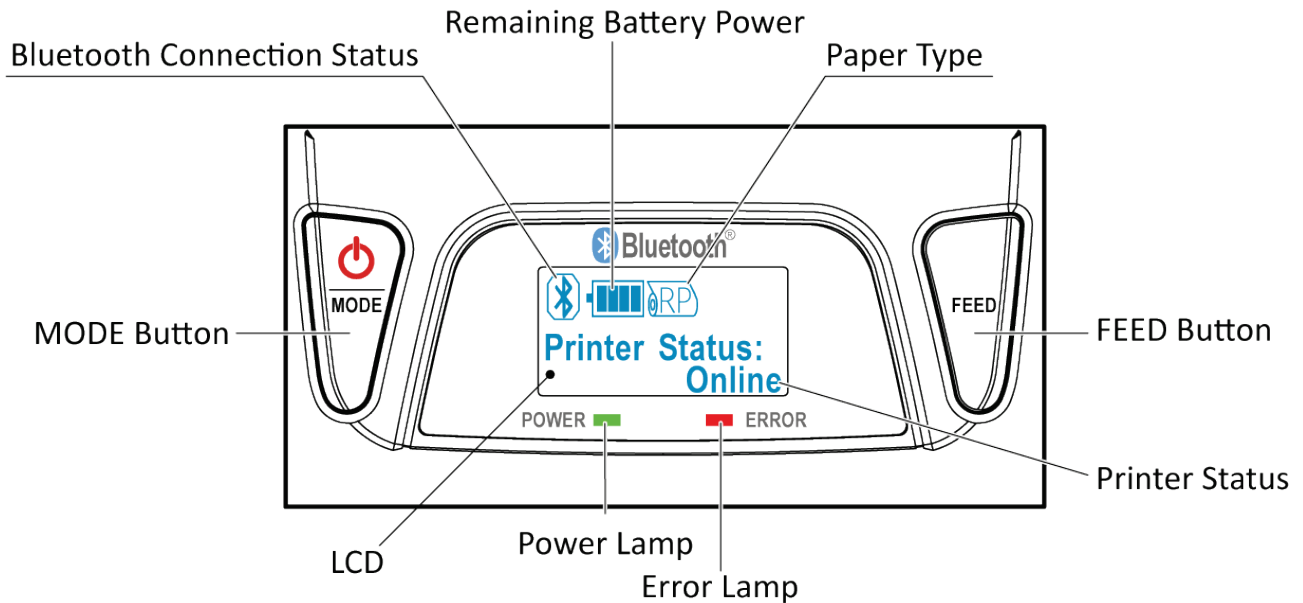

3.1 Button

1) MODE Button:

- Holding the MODE button for 2 seconds or more will turn the power on or off.
- In the memory switch settings mode, the MODE button is to move a cursor(“_”) on the list.
If holding MODE button during setting mode it moves to previous screen.

2) FEED Button:

- When the printer is on, paper can be fed manually by pressing and holding the FEED button for more than one second.
- In the memory switch settings mode, the FEED button is to select the printer mode.
If holding FEED button during setting mode it will define the setting.

- ◆ Holding MODE & FEED buttons for 5 seconds will put the printer into Memory Switch Setting mode.
(Please refer to 3.4 Memory Switch Settings for details about mode conversion.)

3.2 LED & LCD Display / Error

3.2.1 LED & LCD Display

Table1-1

Status			Action		Lamp		LCD LCD Backlight, [Description]	Buzzer	
					Power (Green)	Error (Red)			
Printer Initialization(Power On)					ON	OFF	Backlight ON [Printer Status:Online]	Beep (A->B->C)	
Power OFF	USB Cable is not connected				OFF	OFF	Backlight OFF	Beep (D->E->F)	
	USB Cable is connected	Battery Full		ON	OFF	Backlight OFF			
		Battery Empty		600ms Flashing	OFF	Backlight OFF			
On-Line (Idle)	Bluetooth (COM) USB Cable is not connected		Bluetooth connected		ON	OFF	Backlight ON Maintain the original state Bluetooth Icon ON	Nothing	
			Bluetooth disconnected		ON	OFF	Backlight ON maintain the original state Bluetooth Icon OFF	Nothing	
			Stand-by		1sec Flashing	OFF	Backlight OFF	Nothing	
			Return from Stand-by		ON	OFF	Backlight ON maintain the original state	Nothing	
	USB	USB Cable is connected	Normal	Battery Full	ON	OFF	Backlight ON maintain the original state Battery Icon Battery Full Icon	Nothing	
				Battery is not Full	600ms Flashing	OFF	Backlight ON maintain the original state Battery Icon Charge Icon	Beep (G)	
			Stand-by		1sec Flashing	OFF	Backlight OFF	Nothing	
			Return from Stand-by		600ms Flashing	OFF	Backlight ON maintain the original state	Nothing	
			Taking off cable	Normal	Battery Full	ON	OFF	Backlight ON maintain the original state Battery Icon Battery Full Icon	Nothing

Table1-2

Status			Action	Lamp		LCD LCD Backlight, [Description]	Buzzer
				Power (Green)	Error (Red)		
On-Line (Idle)	USB	Taking off cable	Battery is not Full	600ms Flashing =>ON	OFF	Backlight ON maintain the original state Battery Icon Charge Icon	Beep (G->G->G)
			Stand-by	1sec Flashing	OFF	Backlight OFF	Nothing
			Return from Stand-by	ON	OFF	Backlight ON maintain the original state	Nothing
	MSR Mode	Waiting for swiping	ON	OFF	Backlight ON [MSR MODE...]	Nothing	
		Stand-by	1sec Flashing	OFF	Backlight OFF	Nothing	
		Succeeded decoding	ON	OFF	Backlight ON maintain the original state	Beep (G)	
		Failed decoding	ON	OFF	Backlight ON MSR MODE...	Beep (G->G)	
	Receiving Data	Printing Data (Including busy state)	ON	OFF	Backlight ON [Printer Status : Online]	Nothing	
		Other	ON	OFF	Backlight ON maintain the original state	Nothing	
	Menu Operation Mode			Enter Menu Operation Mode	ON	OFF	Backlight ON [Enter Menu Mode]
While Menu Operation Mode				Backlight ON maintain the original state			When push the button Beep(G)
Get out Menu Operation Mode				Backlight ON maintain the original state			Nothing
Self Test	Printing		Before printing	ON	OFF	Backlight ON [Press Feed To Print]	Nothing
			While printing			Backlight ON [Press Feed To Print]	Nothing
			After printing			Backlight ON Self test menu	Nothing
	MSR	Reading MSR	Online	ON	OFF	Backlight ON [Please Swipe Card]	Nothing
			Error	ON	Flashi ng	Backlight ON [Printer not ready...] → Self test menu	Nothing
			Succeeded decoding	ON	OFF	Backlight ON [Please Swipe Card]	Beep (G)
			Failed decoding			Backlight ON [Please Swipe Card]	Beep (G->G)
	Hex Dump Mode			ON	OFF	Backlight ON [Hex Dump Mode]	Nothing

Table1-3

Status	Action	Lamp		LCD LCD Backlight, [Description]	Buzzer
		Power (Green)	Error (Red)		
Self Test Printing at the button operation	While printing	ON	OFF	Backlight ON maintain the original state	Nothing
	After printing			Backlight ON maintain the original state	Nothing
Writing Firmware	Enter Writing Mode	ON	OFF	Backlight OFF	Nothing
	While Writing			Backlight OFF	Nothing
	Finish Writing			Backlight OFF	Nothing

NOTE:

a) Bluetooth Status icon, Battery status icon and Roll paper Status Icon are always displayed on LCD when backlight is ON.

b) Buzzer sound frequency or pattern

A : 530Hz/192msec E : 667Hz/96msec
B : 670Hz/192msec F : 537Hz/96msec
C : 800Hz/192msec G : 800Hz/96msec
D : 800Hz/96msec

➤ **Bluetooth Connection Status Icon:**

Icon	Bluetooth Status
	No Bluetooth connection
	Bluetooth connection

➤ **Remaining Battery Power Icon:**

No charging

Icon	Battery Status and Voltage
	Empty 7.2~7.4V The remaining battery power is extremely low. *Less than 7.2V Please turn off the printer
	1 bar 7.4~7.5V The remaining battery power is low. Please charge the battery pack.
	2 bars 7.5~7.6V
	3 bars 7.6~7.9V
	4 bars 7.9~8.4V There is sufficient remaining battery power.

While charging

Icon	Battery Status and Voltage
	Charging ~8.3V
	4 bars 8.3~8.4V

➤ **Paper Type Icon:**

Icon	Roll Paper Status
	With receipt paper
	Without paper
	Thermal paper with BM backside
	Label paper with gap

3.2.2 LED & LCD Display for Error

Status		Action		Lamp		LCD LCD Backlight, [Description]	Buzzer
				Power (Green)	Error (Red)		
Error	Recoverable Error	No paper error	Happened	ON	Flashing	Backlight ON [Printer Status:Out of Paper] Roll paper Icon without paper	Beep (G->G)
			Recovered	ON	OFF	Backlight ON [Printer Status:Online] Roll paper Icon maintain the original state	Beep (G)
		Cover open error	Happened	ON	Flashing	Backlight ON [Printer Status:Cover Open]	Beep (G->G)
			Recovered	ON	Depend on paper Flashing or OFF	Backlight ON maintain the original state	Beep (G)
		Black Mark Sensor error		ON	Flashing	Backlight ON [Printer Status: Black Mark Error]	Beep (G->G)
		Gap Sensor error (Transmissive Sensor error)		ON	Flashing	Backlight ON [Printer Status: Gap Sensor Error]	Beep (G->G)
	Auto Recoverable Error	Heat Protection of Thermal Printer Head	Happened	ON	Flashing	Backlight ON [TPH Thermistor detecting]	Nothing
			Recovered	ON	OFF	Backlight ON [TPH Thermistor detecting]	Nothing
	Unrecoverable Error	MSR error		ON	Flashing	Backlight ON [Printer Status:MSR Error]	Beep (G->G->G)
		Black Mark Sensor Adjustment error		ON	Flashing	Backlight ON [Printer Status:BM Adjust Error]	Beep (G->G->G)
		Gap Sensor Adjustment error (Transmissive Sensor Adjustment error)		ON	Flashing	Backlight ON [Printer Status:Gap Adjust Error]	Beep (G->G->G)
		Thermal Head Thermistor error		ON	Flashing	Backlight ON [Printer Status:ThermalHead[Error]	Beep (G->G->G)
		Printer Internal Thermistor error		ON	Flashing	Backlight ON [Printer Status:Priter Error]	Beep (G->G->G)

NOTE:

a) Bluetooth Status icon, Battery status icon and Roll paper Status Icon are always displayed on LCD when backlight is ON.

b) Buzzer sound frequency or pattern

A : 530Hz/192msec

E : 667Hz/96msec

B : 670Hz/192msec

F : 537Hz/96msec

C : 800Hz/192msec

G : 800Hz/96msec

D : 800Hz/96msec

3.3 Self Test

You can use self test to check the printer's settings.


Before you start the self test, make sure that roll paper has been properly loaded into the printer.

3.3.1 Self Test Procedure

- 1) Turn on the power while holding down FEED button.
- 2) The printer will print the current printer status, including the firmware version, communication mode, print settings and QR code that links to the users Manual Download site.
- 3) The self test will finish automatically. The printer will be ready to receive data after the self test finishes.

3.3.2 Printing the Bluetooth Device Name and MAC Address


- 1) Follow the procedure in section 3.3.1 to perform a self test.
- 2) Before the self test finishes, press and hold FEED and MODE at the same time.
- 3) The printer will print the Bluetooth device name and MAC address.

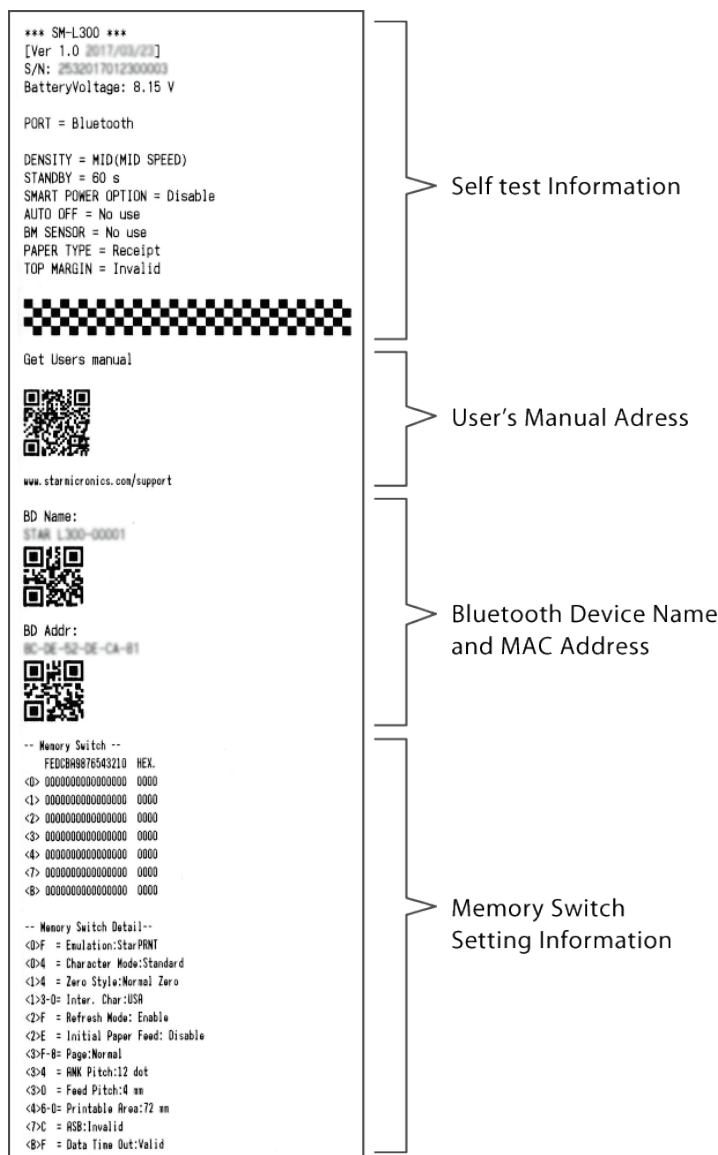

3.4 Memory Switch Settings (Using Buttons On the Printer)

Change the memory switch by following operations.

1. Press and hold MODE button for approx. 2 seconds, and printer is turned on.

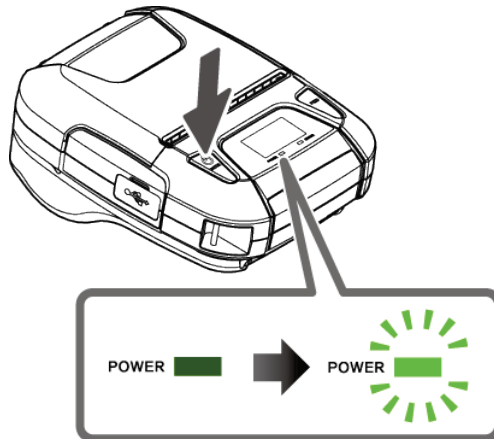

2. To put the printer into Memory Switch Setting mode, press and hold both the MODE & FEED buttons for 5 seconds. After printer displays “Enter Menu Mode”, you can configure the settings, release the buttons after you surely confirm the screen display “Enter Menu Mode”, to get a printer into the setting mode.
3. To switch the Menu and option parameter , or return to the previous menu, press MODE button.
If holding MODE button during setting mode it moves to previous menu.
4. To move the cursor(“_”), entry the printer mode, or confirm the new setting, press FEED button.
Confirms it and move to previous menu.

CAUTION

Before changing the memory switch settings, make sure that the communication with a host device is disconnected. When the printer is under the Bluetooth communication with a host device, it cannot enter the Memory Switch Setting mode.

< Memory Switch Setting Table >

First-level menu		Second-level menu	Third-level menu	Fourth-level menu	Default		
1 Self Test		1 Print	Press Feed To Print	--	--		
		2 MSR	MSR SELF TEST	Please Swipe Card	--		
		3 Hex Dump Mode*1	Hex Dump Mode	--	--		
		4 Previous Menu	--	--	--		
2 System Setting	Input Password: 0000	1 Density	0-Medium 1-Low 2-High 3-Special	--	Medium		
		2 Standby Time	Standby Time: [0010-9999(Sec)]	--	60 Seconds		
		3 Auto Off Time	Auto Off Time: [0000-9999(Min)]	--	0000		
		4 Smart Power	Smart Power 0-Disable 1-Enable	--	Disable		
		5 Paper Type	0-Receipt	--	Receipt		
			1-Label / Sticky	Top Margin 0-Disable [1-9 (mm)]			
		6 Black Mark Sensor	0-No Use 1-Use (3inch) 2-Use (2inch) 3-Use (Center) 4-Label (Gap)	Jump to third-level menu of Printable Area	No Use		
		7 Printable Area	0-72mm (3inch) 1-50.8mm (2inch)	--	72mm (3inch)		
			2-Other	Printable Area: [30 -72 (mm)]			
		8 Factory Reset	0-N 1-Y	--	N		
		9 Password	Input New Password: [0000-9999]	--	0000		
		10 Previous Menu	--	--	--		
		3 Exit Menu			--	--	--

*1) "2 MSR" is function of MSR model only.

NOTE: Refer to item 3.5 to 3.9 about detail of each function.

1) Self Test

- ▶ When in the second-level menu, press the MODE button 9 times to switch the menu item--Previous Menu.

→ Press the FEED button once to return to the previous menu.

Display: 1 Self Test
2 System Setting
3 Exit Menu



- ▶ Press the FEED button once to enter the menu item--Self Test.

Display: 1 Print
2 MSR
3 Hex Dump Mode
4 Previous Menu



→ Press the FEED button once, you will see present "Press Feed To Print" in the LCD, press FEED button, the new settings will be printed.

* "2 MSR" is function of MSR model only.

If the settings were not configured correctly, follow the above procedure to configure the settings again.

2) System Setting

Example

When you want to change the settings of the printer mode as shown below.

Item	Factory Setting	Configuration Example
1 Density	0(Medium)	1(Low)
2 Standby Time	0060(Sec)	0080(Sec)
3 Auto Off Time	0(Invalid)	1000(Min)
4 Smart Power	0(Disable)	1(Enable)
5 Paper Type	0(Receipt)	1(Label/Sticky)
6 BM Sensor	0-No Use	4(Label (2 inch))
7 Printable Area	0(72mm(3inch))	1(50.8mm (2inch))
8 Factory Reset	0(N)	0(N)
9 Password	0000	2222


► Press and hold the MODE & FEED buttons for 5 seconds.

→ You will see present “Enter Menu Mode” in the LCD.



► Press the MODE button once to switch the menu item.

Display: 1 Self Test → 2 System Setting

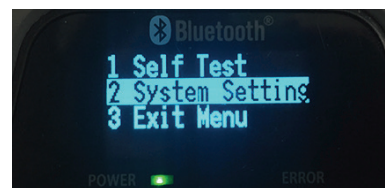

► Press the FEED button once to get into the System Setting menu.

→ You will see present “Input Password 0000” in the LCD.

→ Press FEED button to move cursor(“_”), press MODE button to switch the number (0~9).

Password: 0000(default)



→ Press and hold the FEED button for 2 seconds to get into the menu.

Display: 1 Density
2 Standby Time
3 Auto Off Time
4 Smart Power
5 Paper Type
6 BM Sensor
7 Printable Area
8 Factory Reset
9 Password
10 Previous Menu




1. Density setting

► Press MODE button to switch the menu item, then press the FEED button once to enter the menu.

→ Press the FEED button once to get into the Density menu.

Display: Density:
0-Medium
1-Low
2-High
3-Special

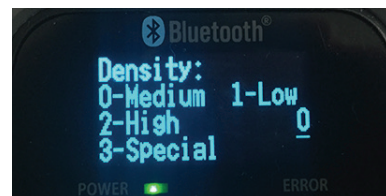


0

→ Press the MODE button once to input the number 1, then press and hold FEED button to confirm the new setting and return to the previous menu.

(The density has set to Low)

0(Medium) → 1(Low)

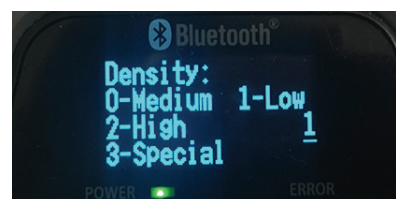

2. Standby Time setting

► Press the MODE button once to switch the menu item--Standby Time.

→ Press the FEED button once to get into the menu.

Display: Standby Time:
[0010-9999(Sec)]
0060



→ Press the FEED button twice to move cursor("-",), then press the MODE button twice to input the number: 8, finally press and hold FEED button to confirm the new setting and return to the previous menu.

(The standby time has set to 80 seconds)

0060(Sec) → 0080(Sec)



When set the parameter to 0000, the standby time becomes invalid.
If set the parameter to 0001~ 0009, a buzzer beeps, so do not set it.

3. Auto Off Time setting


► Press the MODE button twice to switch the menu item--Auto Off Time.

→ Press the FEED button once to get into the menu.

Display: Auto Off Time:

[0000-9999(Min)]


0000

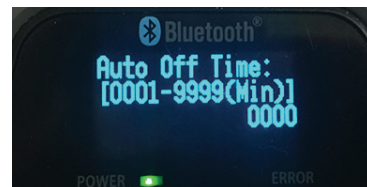

→ Press the MODE button once to input the number on : 1, then press and hold FEED button to confirm the new setting and return to previous menu.

(The auto off time has set to 1000 minutes)

0000(Min) → 1000(Min)

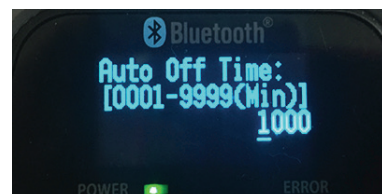

When set the parameter to 0000, the auto off time becomes invalid.

4. Smart Power setting


► Press the MODE button 3 times to switch the menu item--Smart Power.

→ Press the FEED button once to get into the menu.

Display: Smart Power
0-Disable
1-Enable 0



→ Press the MODE button once to input the number on : 1, then press and hold FEED button to confirm the new setting and return to previous menu.

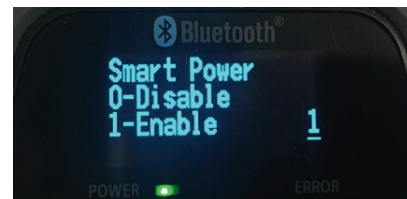


5. Paper Type setting

► Press the MODE button 4 times to switch the menu item--Paper Type.

→ Press the FEED button once to get into the menu.

Display: 0-Receipt
1-Label/Sticky
 0

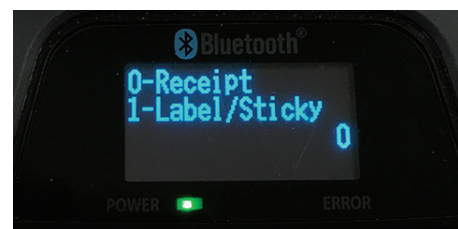

→ Press the MODE button once to input the number on. If 'Label / Sticky' is selected, move to another screen to input data like below.

Display Top Margin
0-Disable
[1-9 (mm)] 0



→ MODE button twice to input the number: 3, finally press and hold FEED button to confirm the new setting and return to the previous menu.

(The top margin has set to 3 mm)

Disable → 3(mm)

6. Black Mark Sensor

► Press the MODE button 5 times to switch the menu item--Black Mark Sensor.

→ Press the FEED button once to get into the menu.

Display: 0-No Use
1-Use(3inch)
2-Use(2inch)
3-Use(Center)
4-Label(Gap) 0



→ Press the MODE button twice to input the number: 4, then press and hold FEED button to confirm the new setting and return to the previous menu.

(The paper type has set to Label (Gap))

No Use → Label (Gap)



7. Printable Area

► Press the MODE button 6 times to switch the menu item--Printable Area.

→ Press the FEED button once to get into the menu.

Display: 0-72mm (3inch)
1-50.8mm (2inch)
2-Other 0



→ Press the MODE button once to input the number 1, then press and hold FEED button to confirm the new setting and return to the previous menu.

(The printable area has set to 50.8mm (2inch))

72mm (3inch) → 50.8mm (2inch)



8. Factory Reset

► Press the MODE button 7 times to switch the menu item--Factory Reset.

→ Press the FEED button once to get into the menu.

Display: 0 - N

1 - Y

0



→ When the setting does not need to be reset, press and hold FEED button to return to the previous menu.

9. Password setting


► Press the MODE button 8 times to switch the menu item--Password.

→ Press the FEED button once to get into the menu.

Display: Input New

Password:


0000

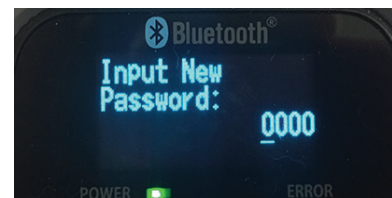

→ Press the MODE button twice to input the number: 2, then press FEED button once to move cursor (" "), press the MODE button twice to input the number: 2, repeat the above steps to input the number "2222", finally press and hold FEED button to confirm the new setting and return to the previous menu.

(The Password has set to 2222)

0000→2222

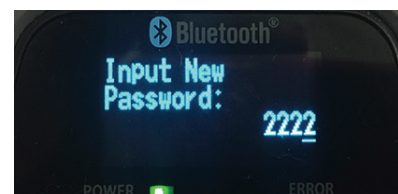

10. Select Previous Menu

► Press the MODE button 9 times to switch the menu item--Previous Menu.

→ Press the FEED button once, then it will returns to the previous menu.

3.5 Hex Dump Mode

All data sent from a host device is printed by hexadecimal codes.

This mode can be used to check if a program to be sent to the printer is coded correctly.

Example

► Press and hold the MODE & FEED buttons for 5 seconds.

→You will see present “Enter Menu Mode” in the LCD.

► Press the FEED button once to enter the menu item--Self Test.

Display: 1 Print
 2 MSR
 3 Hex Dump Mode
 4 Previous Menu

► Press the MODE button 3 times to switch the menu item--Hex Dump Mode.

→Press the FEED button once, you will see present “Hex Dump Mode” in the LCD.

NOTE: It will be limitations such as it cannot return the status.

3.6 Instruction for Power Management

The printer in the Standby(Sleep) Mode will recover to the Print Ready Mode when receiving print data or button operations.

Press the FEED button or the MODE button and confirm that the Power lamp (Green LED) is turned on.

When the Power lamp is not turned on, it is possible that the printer is turned off by the Power OFF mode.

In this case, turn the printer on manually.

3.6.1 Standby Time

Display on LCD is disappeared when a setting time has passed.(0010-9999 sec)

3.6.2 Auto-Off Time

The power is turn off when a setting time has passed.(0001-9999 min)

3.6.3 Smart Power Option

The smart power option is a function to turn on the printer when it is supplied the power.

When the printer is turned off, upon being powered, it will automatically turn on.

Please press and hold the MODE button to turn off the printer when it is supplied the power.

<If AUTO OFF is enabled>

If the smart power option is enabled and printer is turned on and powered, AUTO OFF function will be disabled.

In this case, AUTO OFF function will be enabled after power is interrupted.

For instance, if AUTO OFF is set to 10 minutes and,

The smart power option enabled, printer turned on and powered, then printer will NOT be turned off after 10 minutes.

The smart power option enabled, printer turned on and NOT powered, then printer will be turned off after 10 minutes.

Event Status		Event1	Event2	Event3	Event4
		Powered	Powered Interrupted	Auto Power OFF Time out	Charging completed
Condition 1	Turned OFF No charging	Turn ON (Auto) Start charging	N/A	N/A	N/A
Condition 2	Turned OFF Charging	N/A	Turn OFF No charging	N/A	Turn OFF Charging
Condition 3	Turned ON No charging	Turn ON (Auto) Start charging	N/A	Turn OFF No charging	N/A
Condition 4	Turned ON Charging	N/A	Turn ON No charging	Turn ON Charging	Turn ON Charging

3.7 Paper Type

Please choose proper paper type option in your uses.

0-Receipt

1-Label / Sticky

If 'Label / Sticky' is selected, move to another screen to input data for Top Margin.

* If 'Receipt Paper' is selected, Top Margin function is invalid.

Top Margin:

This sets the top margin from the cutting position (the head of the label in case of label printing) to the print start position.

0-Disable

[1 - 9 (mm)] _

If 'Disable' is selected, the top margin is set to the default value (8.2 mm).

3.8 Black Mark Sensor

When using black mark paper or label paper, set the sensor position suitable for the paper.

0-No Use - For normal Receipts paper and Linerless label paper

1-Use (3inch) - For BM paper which BM is put at the 3 inch width on back of paper

2-Use (2inch) - For BM paper which BM is put at the 2 inch width on back of paper

3-Use (Center) - For BM paper which BM is put at the center on back of paper

4-Label (Gap) - For the Label paper which can be peeled off individually and there is a gap between each labels.

*Refer to chapter 5 for paper specification.

After specifying Paper Type, move automatically to "7 Printable Area" on the printer mode setting list.

*Refer to Page 34

3.9 Printable Area

Please choose proper printable area in your uses.

- 0-72mm (3inch) - For 3 inch paper width
- 1-50.8mm (2inch) - For 2 inch paper width
- 2-Other 0 - For other paper width or need to customize for special setting

If "2-Other" is selected, move to another screen to input data like below.

Printable Area:

[30 - 72 (mm)] _ _

Please set the actual data in your uses.

*If the data has been set on Printable Area setting before, the data is displayed the last previous set data.
(If the data has never set, the data is displayed 72.)

When holding "FEED" button, data will be determined and move to "7 Printable Area" on the printer mode setting list. When holding "MODE" button, move to "7 Printable Area" without setting on the printer mode setting list.

If input data is out of range, beep the buzzer and return data to former value.

4. Magnetic Card Reader (For MSR model)

Please keep the following points in mind when reading a card.


- Swipe the card with its magnetic stripe side towards the printer.
- Hold the card in the center and swipe it straight at a steady speed in the directions of arrows.

You can swipe the card in either direction to read the data.

Be sure to hold the printer firmly with your hand while swiping.

➤ *Pay attention to the hand you hold the printer, your finger should not touch the cover of the MSR slot, if not, the card cannot be read properly. (See correct example on figure below)*

If you hold the corner of the card, it is difficult to swipe it straight so that you may fail to read the card data. So hold the card in the center when you swipe the card.

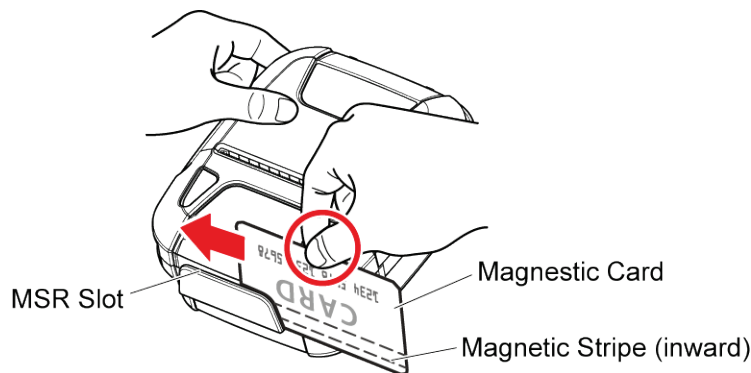


- A buzzer will sound once when a card is successfully read, and you will see present "MSR read success" in the LCD.
- When the printer fails to read the card, the buzzer will sound three times and you will see present "MSR read failure" in the LCD. Please check the orientation of the card, and slide it through the reader slot again.

NOTE:


- 1. Swiping JIS card is also under MSR mode.**
- 2. JIS card operation is same as MSR card operation.**

■ Correct example:

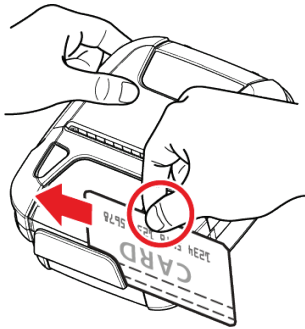


Make sure the magnetic stripe is towards to the magnetic head. Hold the card in the center as left figure and swipe it straight at a steady speed in the direction of arrows.

Incorrect example: To grasp a magnetic card

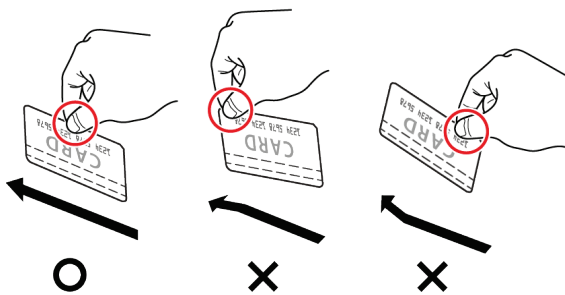

If you grasp the front/rear part of a card and move it through the MSR slot, the front /rear part is loose and a read error occurs.

To move a magnetic card

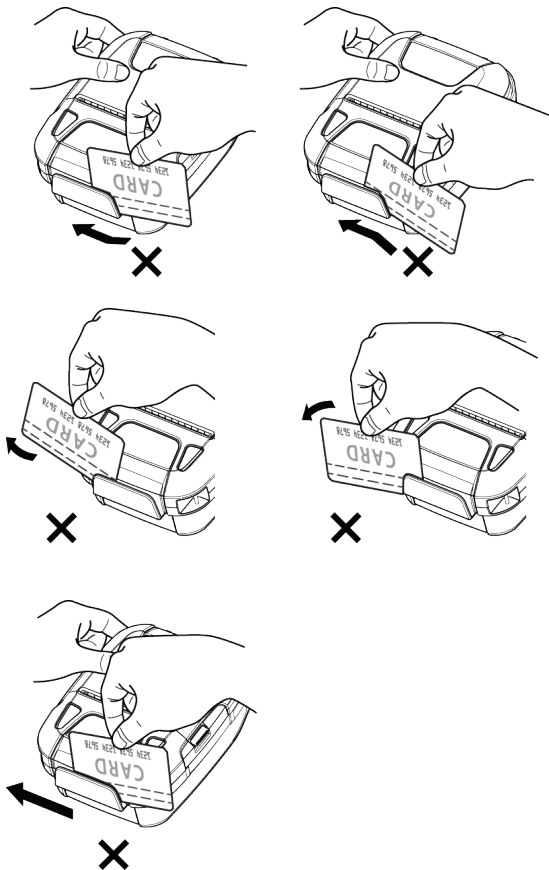

If you insert a card tilted upward/downward into the MSR slot, the card does not move horizontally and a read error occurs.


If you extract a card at the end of the MSR slot by lifting up or lowering down, the card is not maintained and a read error occurs.

If you insert a card into the middle part of the MSR card, the card is not read correctly and read error occurs, or if you move the card back or forth by force after inserting into the MSR slot, the card is not read correctly and a read error occurs.

5. Paper

5.1 Paper Specification

5.1.1 Receipt (thermal) Paper

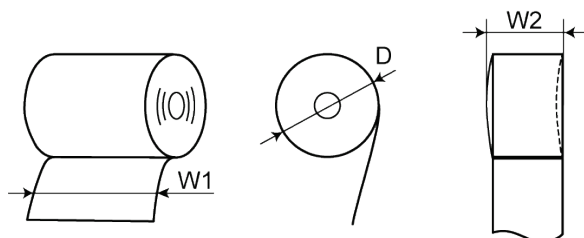

Paper Width (W1)	39.5±0.5mm to 79.5±0.5mm (2mm pitch)	
Paper Thickness	53µm to 85µm	
Recording side	Outside of roll	
Maximum Roll Diameter (D)	Ø57 mm	
Curling dimension (W2)	40+0.5-1 to 80+0.5-1 mm	
Axial	Inner diameter	Ø12±1 mm
	Outer diameter	Ø18±1 mm

NOTE: Do not use roll paper whose end is glued to its core or end is folded at its core, because the printer will be unable to properly detect the end of the paper. Also, we recommend that you use roll paper that has a roll end mark at its end.

(1)Operating

- a) Temperature : 0 to 50 degrees
- b) Humidity: 20 to 85 % RH (No condensation)


*1 The combination of 40 degrees and 85% RH (No condensation) is considered the worst value regarding high temperature and humidity. A higher humidity level higher than 80% combined with a higher temperature can cause a problem if over a prolonged period of time (more than 4 hours).

(2) Recommended Paper

Manufacturer	Product Name	Recommended density
Mitsubishi Paper Mills Limited	P220AG	MID
Appvion, Inc	Alpha 400-2.1	MID
Oji Paper Co., Ltd.	FD200	MID
Oji Paper Co., Ltd.	PD160R-63	MID
Oji Paper Co., Ltd.	PD450	MID

NOTE: Please use the recommended thermal paper or same quality paper, otherwise it will influence the printing quality and decrease the thermal print head life. Some types of the paper are not suitable for use of other than the recommended print density settings.

5.1.2 Label Paper

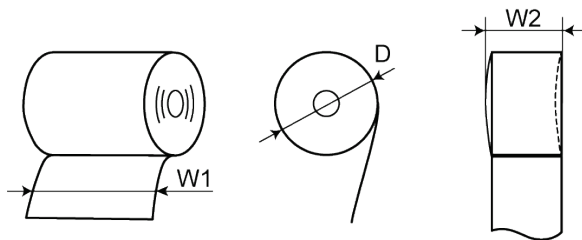

Paper Width (W1)	39.5±0.5mm to 79.5±0.5mm (2mm pitch)	
Paper Thickness	Max. 150µm	
Recording side	Outside of roll	
Maximum Roll Diameter (D)	Ø57 mm	
Curling dimension (W2)	40+0.5-1 to 80+0.5-1 mm	
Axial	Inner diameter	Min Ø25.4±1
	Outer diameter	Min Ø30±1

NOTE: Do not use roll paper whose end is glued to its core, because the printer will be unable to properly detect the end of the paper. Also, we recommend that you use roll paper that has a roll end mark at its end.

(1)Operating

- a) Temperature : 0 to 50 degrees
- b) Humidity: 20 to 85 % RH (No condensation)

*1 The combination of 50 degrees and 85% RH (No condensation) is considered the worst value regarding high temperature and humidity. A higher humidity level higher than 80% combined with a higher temperature can cause a problem if over a prolonged period of time (more than 4 hours).


(2)Recommended Paper

Manufacturer	Product Name	Recommended density
RICHO	150PSMW	High
UPM	DT80W	MID

NOTE

1. Please use the recommended thermal paper or same quality paper, otherwise it will influence the printing quality and decrease the thermal print head life.
Some types of the paper are not suitable for use of other than the recommended print density settings.
2. When these paper are manufactured, since the end of paper of roll might be fixed by tape with core, the printer might not be able to complete printing properly.

5.1.3 Linerless Label Paper

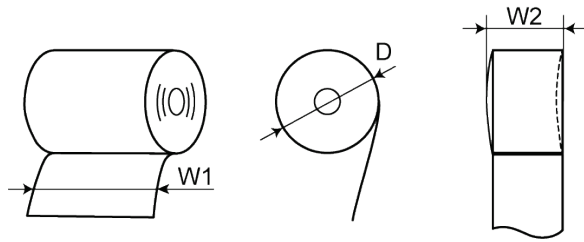

Paper Width (W1)	39.5±0.5mm to 79.5±0.5mm (2mm pitch)	
Paper Thickness	86µm	
Recording side	Outside of roll	
Maximum Roll Diameter (D)	Ø57 mm	
Curling dimension (W2)	40+0.5-1 to 80+0.5-1 mm	
Axial	Inner diameter	Min Ø12.7±1
	Outer diameter	Min Ø18±1

(1)Operating

- a) Temperature : 0 to 45 degrees
- b) Humidity: 20 to 80 % RH (No condensation)

*1 The combination of 40 degrees and 80% RH (No condensation) is considered the worst value regarding high temperature and humidity. A higher humidity level higher than 80% combined with a higher temperature can cause a problem if over a prolonged period of time (more than 4 hours).

(2)Transport / Storage

- a) Temperature : 0 to 30 degrees
- b) Humidity : 45 to 65 % RH (No condensation)

*1 This is a recommended storage range for temperature and humidity.

However, the storage condition could be the same as the operating condition provided the recommended humidity level is not exceeded over a prolonged period of time (more than 4 hours).

If the storage condition does exceed the 4 hour period at the higher temperature/humidity condition, we would recommend the rolls be in operating ambient conditions for two hours to acclimate to the normal operating range.

(3) Recommended Paper

Manufacturer	Product Name	Recommended density
MAXStick	MAXStick PLUSD	High

NOTE: *Perform cleaning regularly so that the printer can be used safely and comfortably.*

(Every time when a paper roll is ended.)

*Since it is a special thermal paper with glue, there will be some irregular things happened as following: (*However, it is not a printer defect)*

- *Void printing*
- *When a roll paper reaches the end, the printer might not be able to complete printing properly due to glue.*
- *etc.*

Please refer to the “Maintenance for using Linerless Label Paper”


CAUTION

- 1) Do not use roll paper whose end is glued to its core, because the printer will be unable to properly detect the end of the paper. Also, we recommend that you use roll paper that has a roll end mark at its end.*
- 2) Chemicals and oil may cause the roll paper to change color or cause the printed characters to become lighter.*
- 3) Please be aware that the roll paper can be affected by heat, humidity, and direct sunlight.*
- 4) The roll paper may change color if you scratch it with your fingernail, a hard piece of metal, etc.*
- 5) Please use Star recommended label paper. A label paper or receipt (thermal) paper whose end has been glued by tape or adhesive to the core may result in the printer being unable to properly detect the end of the paper or may cause damage to the mechanism, voiding the warranty.*

5.2 Printable Area

NOTE: To avoid paper jams and other problems, feed the paper at least 1 mm (8 dot lines) before printing.

5.2.1 Receipt (thermal) Paper

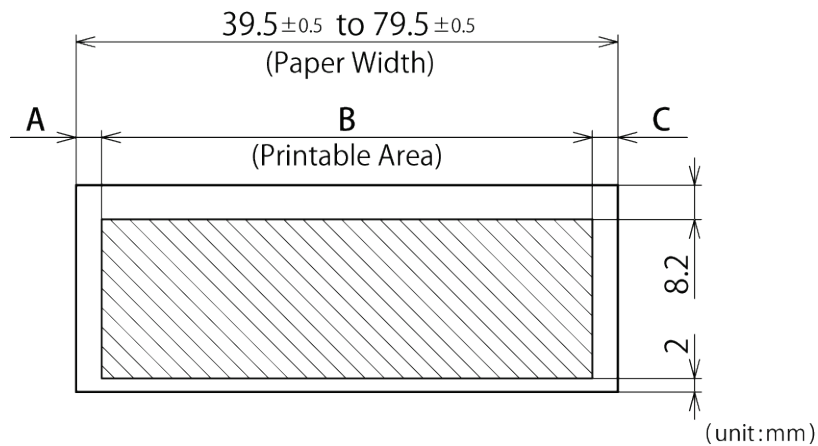


Paper Width	A Left Margin	B Printable Area	C Right Margin
39.5mm to 79.5mm	3.75mm	32mm or 72mm	3.75mm
Minimum Printable Region (39.5mm)	4.75mm	30mm	4.75mm

Printable area and Margin set by panel operation.

	Paper Width	A Left Margin	B Printable Area	C Right Margin
72mm (3 inch)	79.5mm	3.75mm	72mm	3.75mm
50.8mm (2inch)	57.5mm	3.38mm	50.75mm	3.38mm

NOTE: Please refer to “3.9 Printable Area” about detail of setting.

● Printable area of BM specification

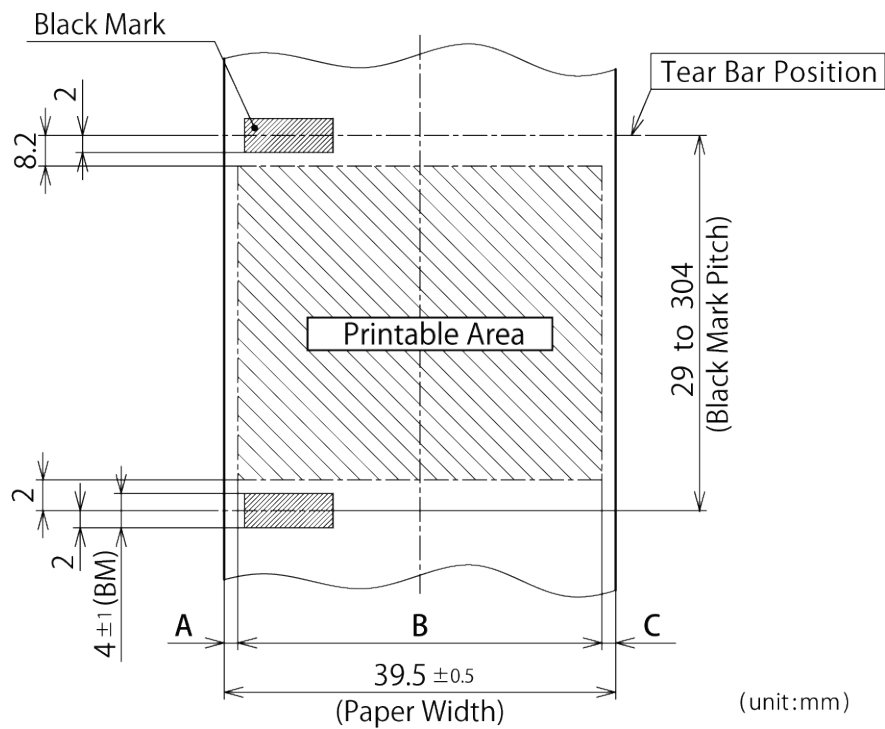

Paper Width	A Left Margin	B Printable Area	C Right Margin
39.5mm to 79.5mm	3.75mm	32mm or 72mm	3.75mm
Minimum Printable Region (39.5mm)	4.75mm	30mm	4.75mm

Printable area and Margin set by panel operation.


	Paper Width	A Left Margin	B Printable Area	C Right Margin
72mm (3 inch)	79.5mm	3.75mm	72mm	3.75mm
50.8mm (2inch)	57.5mm	3.38mm	50.75mm	3.38mm

NOTE: Please refer to “3.9 Printable Area” about detail of setting.


5.2.2 Label Paper

Label paper can be used in BM mode and Label mode.

- When the BM mode

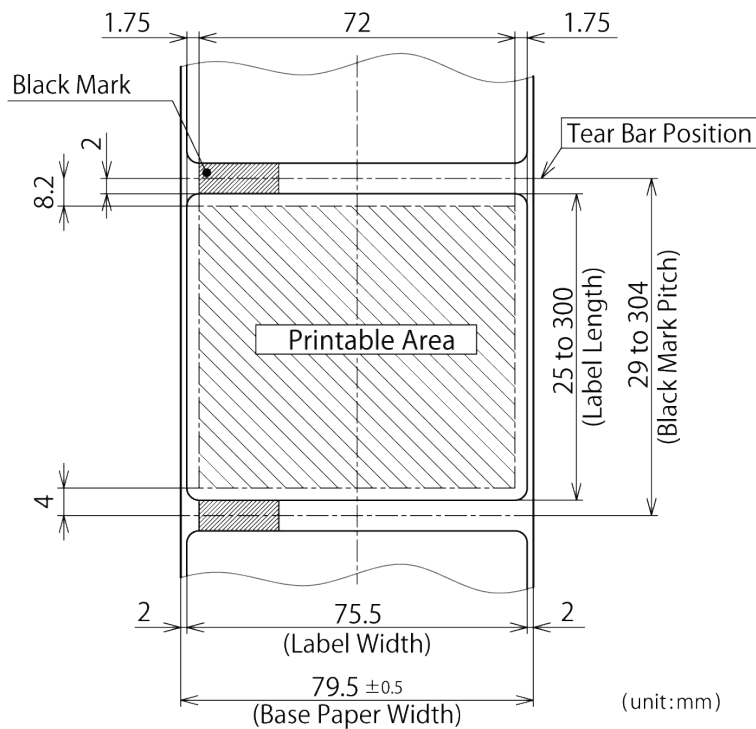


- When the Label mode

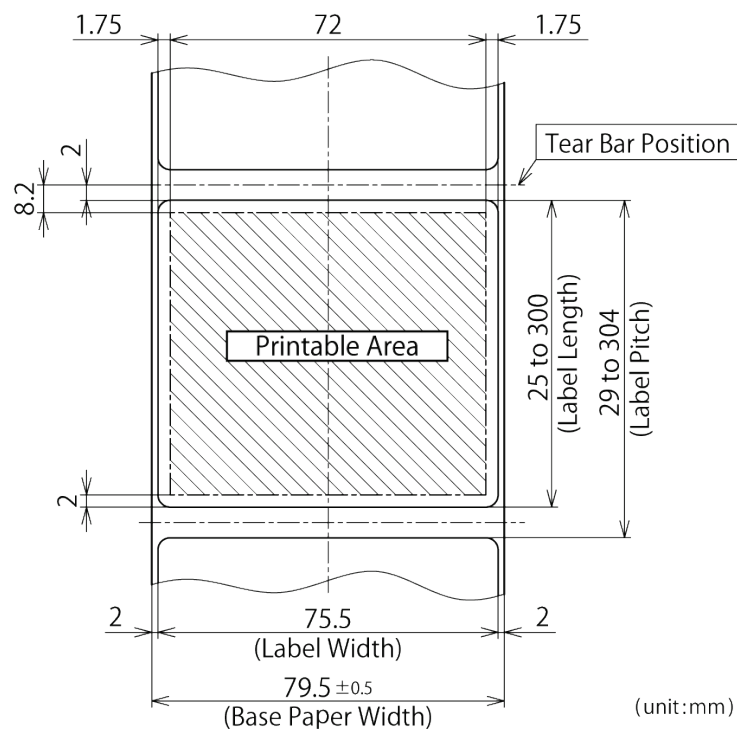

NOTE:

- 1. When using label paper, adequately check operations on the actual layout and print media.**
- 2. Please refer to “3.9 Printable Area” about detail of setting.**

5.2.3 Linerless Label Paper

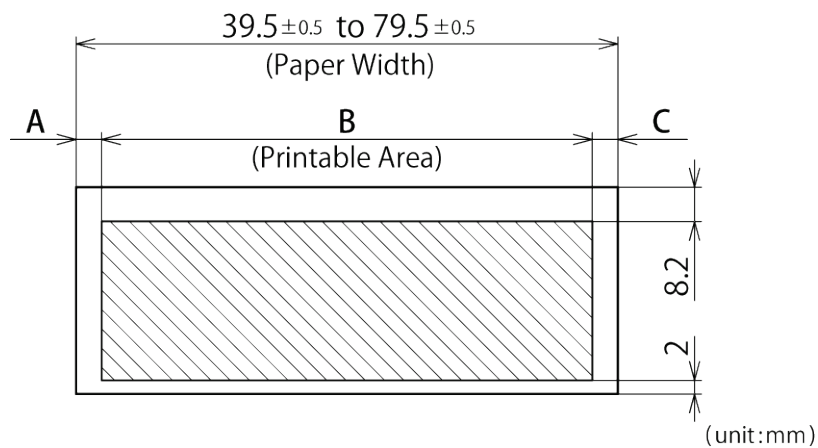

Paper Width	A Left Margin	B Printable Area	C Right Margin
39.5mm to 79.5mm	3.75mm	32mm or 72mm	3.75mm
Minimum Printable Region (39.5mm)	4.75mm	30mm	4.75mm

Printable area and Margin set by panel operation.

	Paper Width	A Left Margin	B Printable Area	C Right Margin
72mm (3 inch)	79.5mm	3.75mm	72mm	3.75mm
50.8mm (2inch)	57.5mm	3.38mm	50.75mm	3.38mm


NOTE: Please refer to “3.9 Printable Area” about detail of setting.

5.3 Specification of Black Mark


SM-L300 supports black mark on back sides of the paper and the specification of black mark is illustrated by the following image.

- NOTE:**
1. *There is a possibility of Black Mark malfunction. Please contact the dealer when you would like to preprint paper.*
 2. *The left side of black mark sensor is also supported in case of the special paper.*
 3. **Black Mark Density : Black mark of Minimum 0.8 PCS.**


5.3.1 Receipt(thermal) Paper

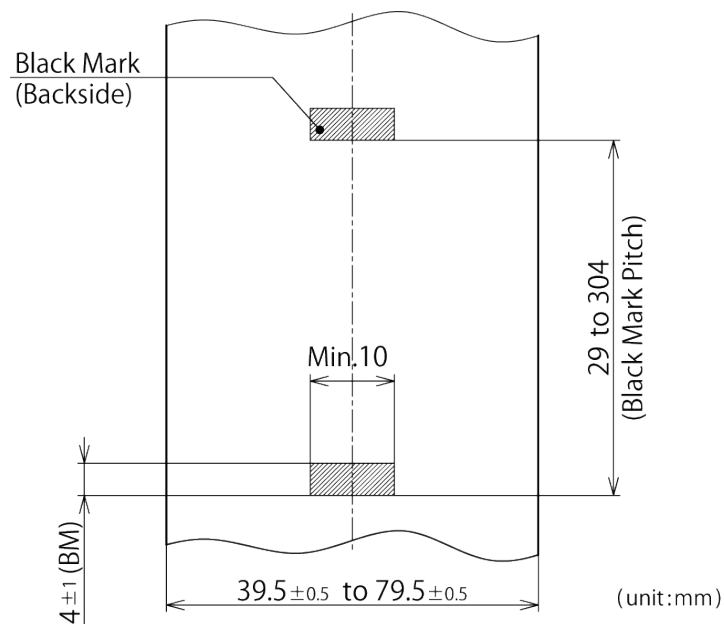


- 58 or 80 mm width only

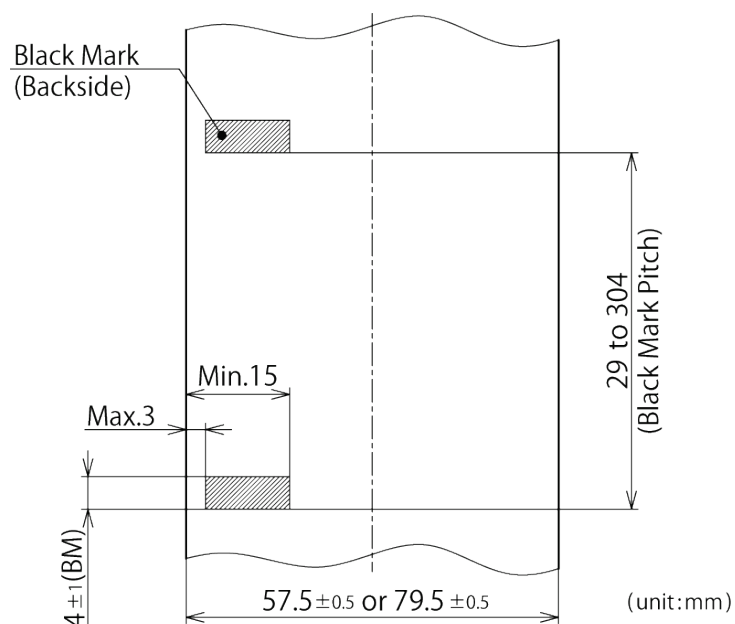

- **58 or 80 mm width only**

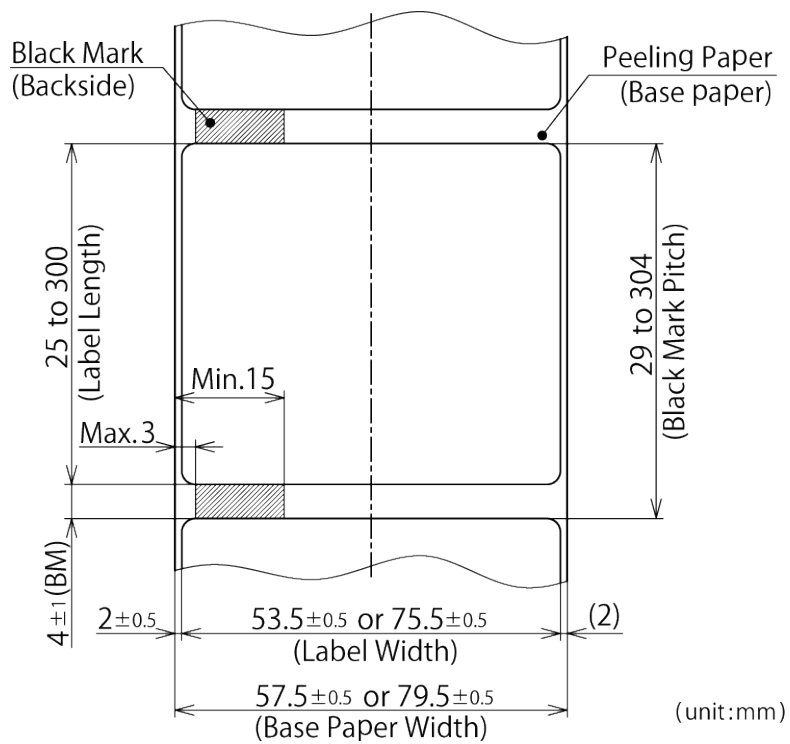

5.4 Specifications of Label Paper

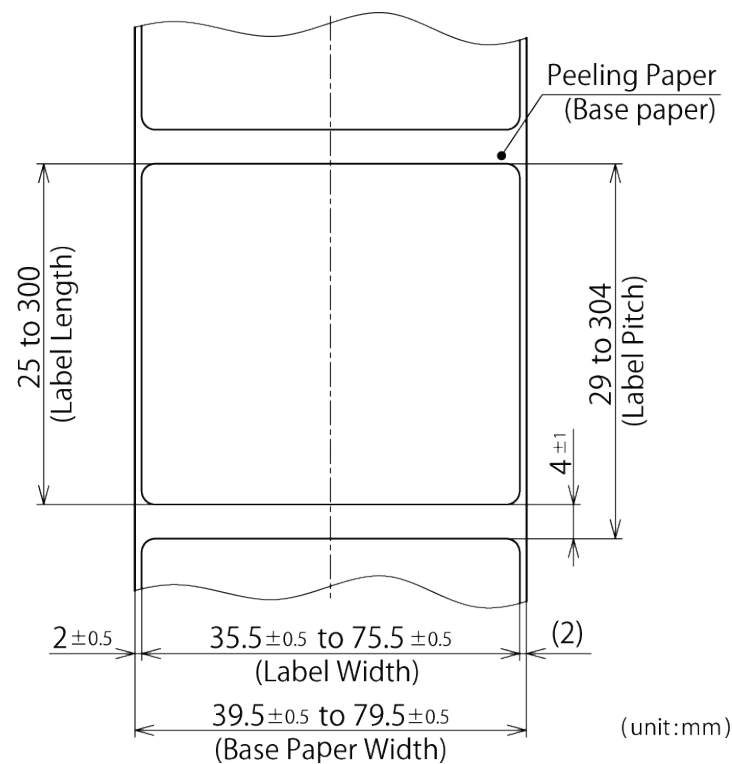

6. General Specification

Table 6-1

Item		Specifications	
Printing	Printing Method	Direct line thermal printing	
	Resolution	203dpi (8dots/mm)	
	Printing Speed	Max.65mm/s	
	Valid Printing Width	Max.72mm	
Interface	Bluetooth Specification	Communication	Bluetooth Ver 3.0/4.0 [BLE] Dual Mode
		Frequency Range	2.4GHz ISM-band
		Data Transmission Rate	115200bps adjustable
		Data Bit	8 data bit fixed
		Parity Bit	No parity fixed
		Stop Bit	1 stop bit fixed
		SSP	Compatible
	USB	Micro-USB	
Power Saving	Stand-by	YES	
Character Set	Font	Alphanumeric: 9x17, 9x24, 12x24 dots Kanji: 24x24 dots	
Barcode Symbolologies	1D	UPC-A, UPC-E, JAN/EAN8, JAN/EAN13, CODE39, ITF, CODE128, CODE93, CODABAR(NW-7), GS1-128, GS1 Omnidirectional, GS1 Truncated, GS1 Limited, GS1 Expanded	
	2D	QR code(Support 20mil), PDF417, GS1 Stacked, GS1 Stacked Omnidirectional, GS1 Expanded Stacked, GS1 Composite Symbols	
Graphics		Support bitmap printing with different density and user defined bitmap printing (Max. 512K for total)	
Detection	Sensors	Cover open sensor, Paper end sensor, Black mark sensor, Transmissive sensor(Label Gap sensor), Thermal head thermistor, Printer internal thermistor.	
LED	Power Lamp	Green	
	Error Lamp	Red	
Drop resistance		1.2m	

Table 6-2

Item		Specifications
Charging (USB charge)		DC 5V $\overline{\text{---}}$ 1.0A(Max), *Time required for full charge: Around 5 hours
Power Supply	Battery	2000mA 7.4V rechargeable battery pack
	Battery Operating Time	Approximately 43 hours printing (12 receipts per hour with sleep mode)
LCD		128 x 64 dots with Blue Backlight
MSR (Single Head) MSR model only	Format	ISO 7810, ISO 7811, ISO7812 1st, 2nd and 3rd Track/ JISII Track Reading
	Security	AES or 3DES encryption. DUKPT Key Management
Enviromental Requirements *1	Operating Condition	0°C to 50°C, 20% to 85%RH (No condensation) The combination of 40°C and 85% RH (No condensation) is considered the worst value regarding high temperatures and humidity.
	Charging Condition	0°C to 45°C, 20% to 85%RH (No condensation) (0~10°C : Max. 0.5 A (Recommendation) *2
	Storage Condition	-20°C to 60°C, 5% to 90%RH (No condensation) The combination of 40°C and 90% RH (No condensation) is considered the worst value regarding high temperatures and humidity.
Physical Characteristics	Dimension	SM-L300:119.1(W) x 146.4(H) x 69.0(D) mm SM-L304:119.1(W) x 150.8(H) x 69.0(D) mm
	Weight	SM-L300:540g (including battery pack) SM-L304:552g (including battery pack)
Reliability	TPH	50km(not more than 12.5% printing density)/100 million pulses (Linerless = 10 km)
Software	Emulation	StarPRNT mode

*1) Please refer to 5.1 for the linerless label paper.

*2) When the printer is used in a low temperature environment(less than 10 degrees), the battery's performance will be diminished, and the amount of time that you can use the printer for may be reduced.


NOTE:

- 1. The periodic maintenance is required for use of linerless label paper.***
- 2. The barcode print quality largely depends on the color characteristics of the thermal paper, the environment (such as temperature and humidity) of the printer location, the print density.***
- 3. When you read the printed barcodes using a scanner or other type of device, it is strongly recommended that you evaluate the data scanning quality beforehand.***

■ Dimensions


➤ SM-L300

- External Dimension: 119.1mm (W) x 146.4mm(H) x 69.0mm (D)
- Weight : 540g (including battery pack)
- Body Color : Black

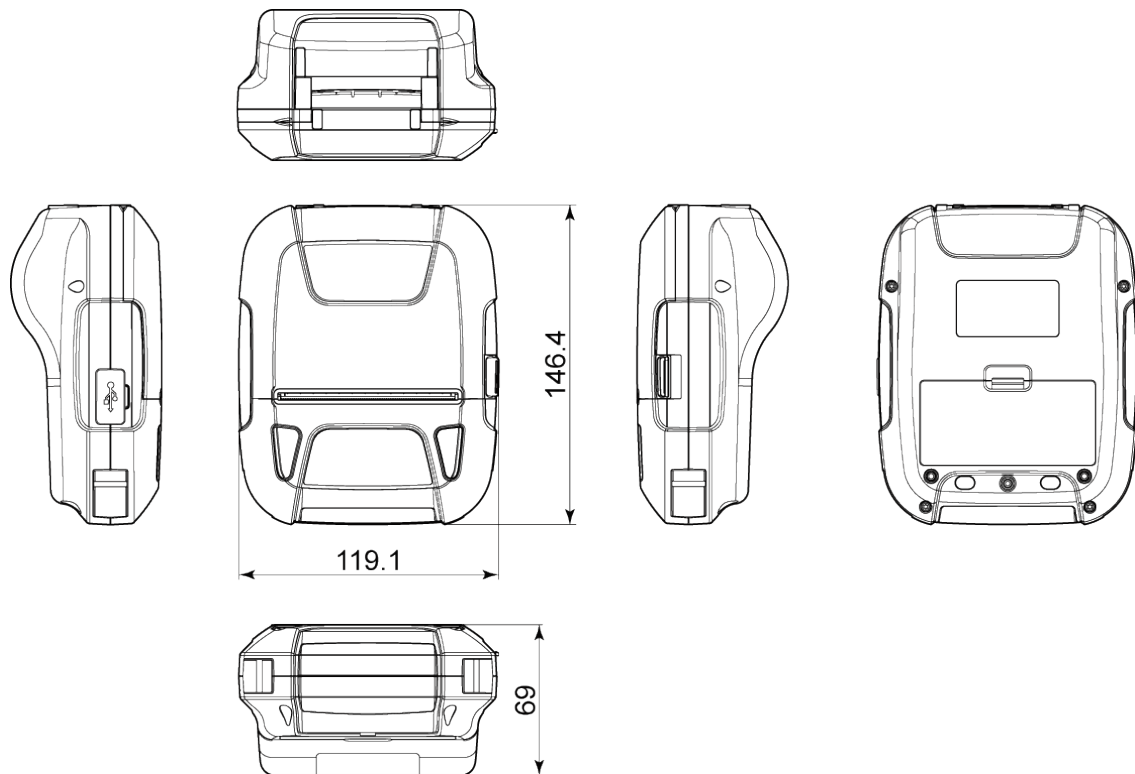

➤ SM-L304

- External Dimension: 119.1mm(W) x 150.8mm(H) x 69.0mm(D)
- Weight : 552g (including battery pack)
- Body Color : Black

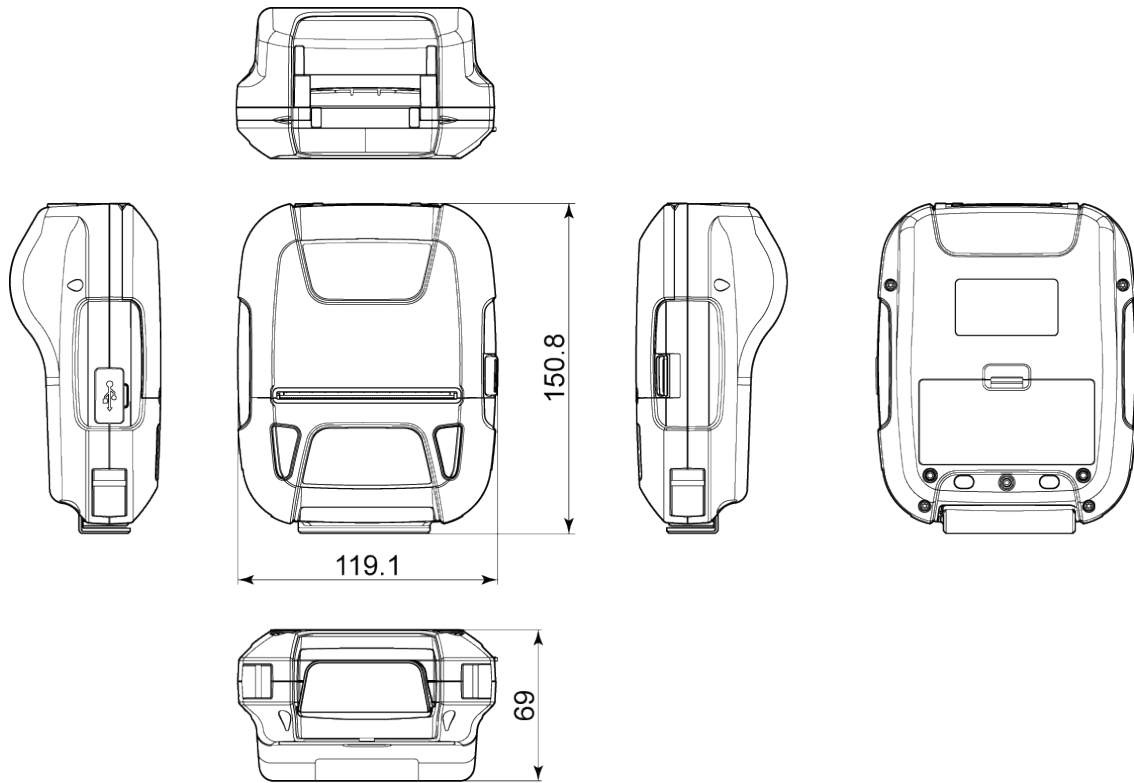

7. Revision History

[illegible]



<http://www.starmicronics.com/support/>