

Remote Control 22AV1601A/12 setup instruction

The Remote Control has 2 operational modes.

Press 2 buttons simultaneously for more than 4 seconds to activate the mode:

Mode	Combination Key
RC6 (default)	Mute + Channel up
RC5	Home + Volume up

The Remote Control has 14 Multi-RC modes.

Press 2 buttons simultaneously for more than 4 seconds to activate the mode:

Mode	Combination Key
Blue (default)	Home + Volume down
Yellow	Home + Channel down
Red	Back + Volume down
Green	Back + Channel down
00	Home + Clock
01	Home + Subtitle
02	Home + Arrow UP
03	Home + TV
04	Home + Arrow Left
05	Home + OK
06	Home + Arrow Right
07	Home + Back
08	Home + Arrow Down
09	Home + Mute



Note:

The Multi-RC setting and RC5/6 mode is permanently stored (it is not reset when changing the battery)