# Explorer 500 Series

User Guide

### Contents


```
Welcome 3
What's in the box 4
Accessories 5
Headset Overview 6
  Be safe 6
Pair 7
  Get Paired 7
  Use two phones 7
Adjust the fit 8
Charge Headset 9
The Basics 10
  Answer or end a call 10
  End a call 10
  Reject incoming call 10
  Volume 10
  Mute or unmute headset 10
  Redial 10
  Voice control (Siri, Google Now, Cortana)
  Voice enabaled assistant 10
DeepSleep Mode 11
Decipher the Lights 12
Hear it Whisper
Select language
Specifications
Install the App
               16
Support 17
```

### Welcome

Congratulations on purchasing your new Plantronics product. This guide contains instructions for setting up and using your Explorer 500 series headset.


Please refer to the safety instructions for important product safety information prior to installation or use of the product.

### What's in the box

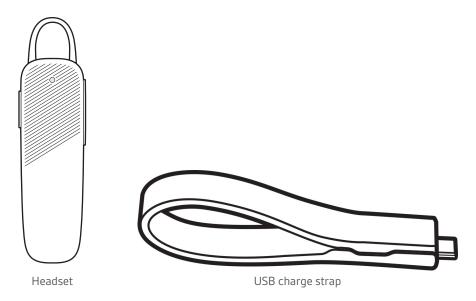


**NOTE** Headset design and contents may vary by product.

### Accessories

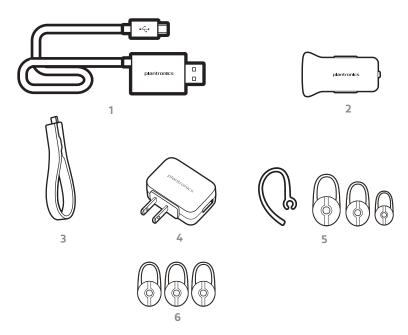

- **1 2-in-1 Charging cable** PN; Black 88852-01, White 88852-02
- **2 USB car charger** PN; Black 89110-01, White 89110-02
- **3 USB charge strap** PN; 204180-01
- **4 Wall charger** PN; 89304-01
- **5 Fit kit** PN; 201777-03
- **6 Eartip pack** PN; 201955-01 Small, 201955-02 Medium, 201955-03 Large *Sold separately.*

### **Headset Overview**

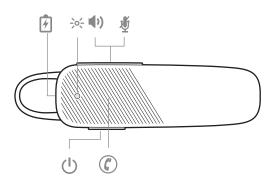

O	Power button
<b>©</b>	Call button
Ŧ	Charge port
->o(-	Headset LED (indicator light)
<b>(</b> 1)	Volume button: Increases or decreases volume
Ą	Mute

Be safe


Please read the safety guide for important safety, charging, battery and regulatory information before using your new headset.

#### Pair

#### Get Paired

The first time you power on your headset, it begins the pairing process.

1 Wearing your headset, power it on. You hear "pairing" and the headset indicator lights flash blue and red.



- 2 Activate Bluetooth® on your phone and set it to search for new devices.
  - iPhone Settings > Bluetooth > On\*
  - Android<sup>™</sup> Settings > Bluetooth: On > Scan for devices\*

NOTE \*Menus may vary by device.

3 Select "PLT\_500."

If necessary, enter four zeros (0000) for the passcode or accept the connection.

Once successfully paired, you hear "pairing successful" and the headset indicator lights stop flashing.

#### Use two phones

Multipoint technology lets you pair a second phone and answer calls from either phone.


- Power on your headset.
- Press and hold the Call button until the indicator light offlashes red and blue or you hear pairing."
- While the indicator light flashes red and blue, activate Bluetooth on your phone and set it to search for new devices.
- 4 Select PLT\_500

If necessary, enter passkey 0000 and accept the connection.

Once successfully paired, the indicator light stops flashing and you hear "pairing successful."


## Adjust the fit

The universal-fit eartip has a thin loop that bends to gently tuck into the contours of either ear. To adjust the fit, you can rotate the eartip on the headset or add the optional clip-on earloop.

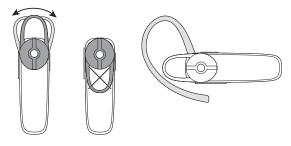


## Charge Headset


You may charge your headset using the included USB charging strap connected to any powered USB port  $\ensuremath{\mathsf{USB}}$ 

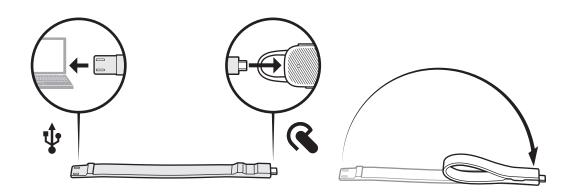

When finished charging, take your headset on the go by attaching the strap to a key ring, bag strap, belt loop, or any suitable object

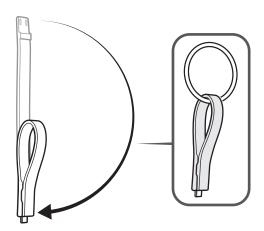

### The Basics

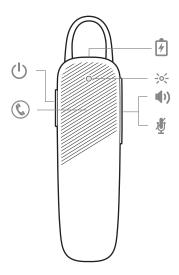

Answer or end a call

Tap the Call 🕲 button.

End a call

Tap the Call ©button.

Reject incoming call

Press Call button © for 2 seconds.

Volume

To increase the volume, tap the Volume  $\P$ ) button. To decrease the volume, press and hold the Volume  $\P$ ) button.\*

\*Android phone must be set to medium/high or audio will sound to low.

Mute or unmute headset

During a conversation, press and hold both the Volume up • and Volume down • buttons until you hear "mute on" or "mute off." While the microphone is muted, a reminder tone repeats every 15 minutes.

Redial

To call your last number dialed, double tap the Call button. ©

Voice control (Siri, Google Now, Cortana)

Press and hold the Voice Dutton for 2 seconds. A series of tones will indicate the voice control is active.

Voice enabaled assistant

To activate Siri or Google Voice, press the Call button © for 3 seconds. (Devices may vary.)

## DeepSleep Mode

If you leave your headset powered on but out of range of your paired phone for more than 90 minutes, your headset will conserve its battery power by entering into a DeepSleep mode.

Once back in range with your phone, press the Call ©button to exit DeepSleep mode.

## Decipher the Lights

Your headset has an indicator light  $\stackrel{>}{>} \stackrel{<}{\circ}$  that flashes in response to a change in status or after a button press.

Some examples of what you will see are:

- Solid red until charging complete and then off
- Flashing red and blue during pairing
- Triple red flash when less than 10 minutes of talk time
- Triple blue flash at incoming call

### Hear it Whisper

Your headset tells you about status changes. For example:

"Power on"

"Pairing successful"

"Talk time (x) hours"

"Mute on"

"Incoming call"

"Answering call"

"Phone disconnected"

"Recharge headset"

### Select language

Once your headset is paired and connected to your phone, you can change the headset language.

- 1 Wearing your headset, power it on.
- 2 Press and hold the Volume up ♠) and down ♠ buttons together until you hear "welcome." The language selection directions repeat in every supported language.
- 3 Follow the voice-guided prompts to select the headset language.

## Specifications

Talk Time	Up to 7 hours
Standby Time	Up to 11 days
Operating Distance (Range)	Up to 33 feet (10 meters) from phone or table, Class II
Headset Weight	7.5 grams
Charge Connector	Micro USB charging
Battery Type	Rechargeable non-replaceable lithium ion polymer
Charge Time (Maximum)	2 hours for full
DeepSleep mode	Provides up to 180 days
Power Requirements	5V DC – 150 mA
Bluetooth Version	Bluetooth v4.1
Bluetooth Profiles	Advanced Audio Distribution Profile $$ v1.2 (A2DP), Hands-Free Profile $$ v1.6 (HFP), Headset Profile $$ v1.2 (HSP),
Audio	High Quality CVDS, mSBC, SBC codec, HD Voice, 10mm speakers, Frequency response 100-20,000 Hz, GSMA HD Voice certification
Noise Reduction	Digital Signal Processing (DSP): Full duplex echo cancellation, Wind noise reduction, Dual-Mic Noise Reduction, Receive Path Noise Reduction
Moisture Protection	No
Operating Temperature	32°F - 102°F (0 - 40°C)
Storage Temperature	32°F - 102°F (0 - 40°C)
Charging Temperature	32°F - 104°F (0 - 40°C)

### Install the App

Get the most from your headset by installing our free mobile app, Plantronics Hub for iOS/Android. Explore all of your headset's features, view instructions, and contact Plantronics support easily from your smartphone.

plantronics.com/apps

### Support

EN	FI	NO
Tel: 0800 410014	Tel: 0800 117095	Tel: 80011336
AR	FR	PL
Tel: +44 (0)1793 842443*	Tel: 0800 945770	Tel: +44 (0)1793 842443*
CS	GA	РТ
Tel: +44 (0)1793 842443*	Tel: 1800 551 896	Tel: 0800 84 45 17
DA	HE	RO
Tel: 80 88 46 10	Tel: +44 (0)1793 842443*	Tel: +44 (0)1793 842443*
DE	HU	RU
Deutschland 0800 9323 400	Tel: +44 (0)1793 842443*	Tel: 8-800-100-64-14
Österreich 0800 242 500 Schweiz 0800 932 340		Tel: +44 (0)1793 842443*
EL	IT	SV
Tel: +44 (0)1793 842443*	Tel: 800 950934	Tel: 0200 21 46 81
ES	NL	TR
Tel: 900 803 666	NL 0800 7526876	Tel: +44 (0)1793 842443*
	BE 0800 39202	
	LUX 800 24870	

#### **NEED MORE HELP?**

#### plantronics.com/support



Plantronics BV Plantronics, Inc. 345 Encinal Street South Point Building C

Santa Cruz, CA 95060 Scorpius 140

**United States** 2132 LR Hoofddorp, Netherlands

© 2015 Plantronics, Inc. Plantronics, Plantronics Explorer and Simply Smarter Communications are trademarks of Plantronics, Inc. registered in the US and other countries, and Explorer is a trademark of Plantronics, Inc. Bluetooth trademarks are owned by Bluetooth SIG Inc., any use by Plantronics, Inc. is under license. iPhone is a trademark of Apple Inc., registered in the US and other countries. All other trademarks are the property of their respective owners.

Patents pending 204740--06 (08.15)