


LTE7490-M904

Quick Start Guide

4G LTE-A Pro Outdoor Router

Package Contents

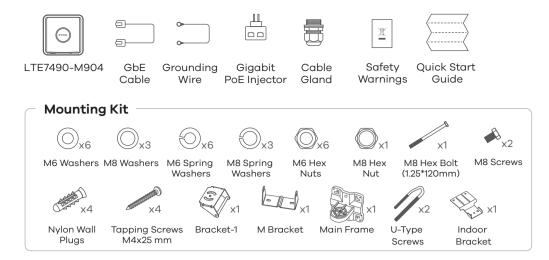


See the User's Guide at www.zyxel.com for more information, including customer support and safety warnings.


EU Importer

Zyxel Communications A/S Gladsaxevej 378, 2. th. 2860 Søborg, Denmark https://www.zyxel.com/dk/da/

Copyright © 2020 Zyxel Communications Corp. All Rights Reserved.

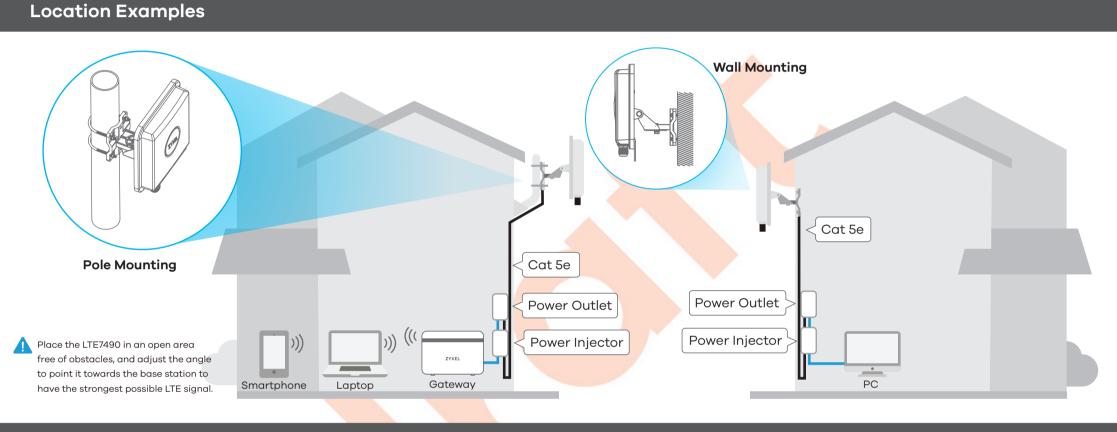


Step 1 SIM Card Installation

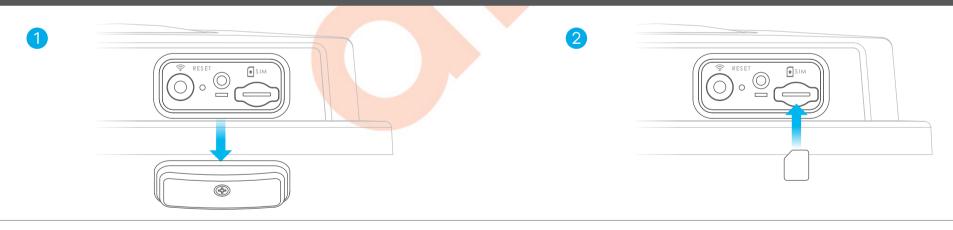


ZYXEL

(1) Make sure the LTE7490 is turned off. There should be no Ethernet cable connected providing power using PoE. Unscrew the SIM card slot cover and remove it.

Step 2 Cable Connections

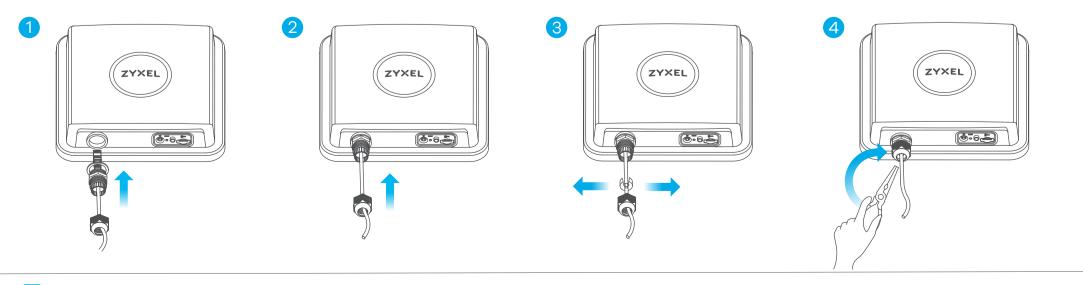


(1-4) Follow steps 1 to 4 in the drawing to connect an 8-pin Cat 5e Ethernet cable to the LTE7490's LAN port.

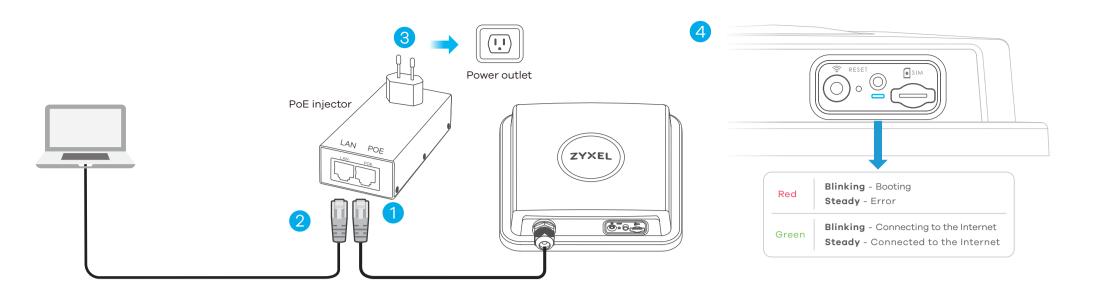

- ① Connect the other end of the Ethernet cable to the provided PoE injector's **OUT** port.
- (2) Connect the **IN** port of the injector to a computer with an Ethernet cable for initial configuration.
- ③ Connect the power plug on the PoE injector to a power outlet.
- 4 Check the LED next to the SIM card slot.

Step 4 Connecting WiFi to Your LTE7490 for Easy Setup

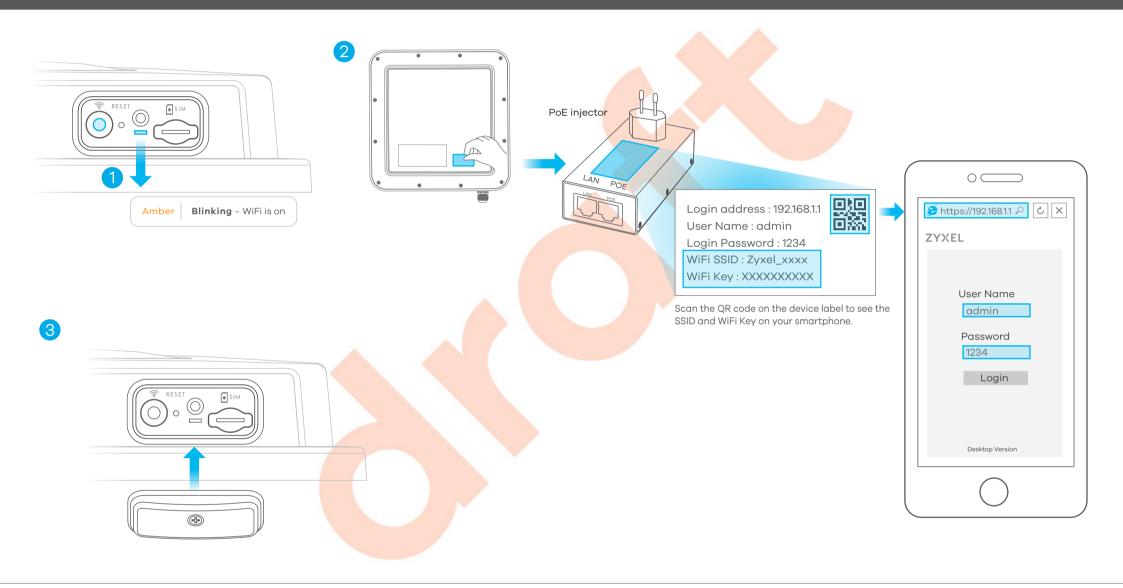

① Check if WiFi is on - the amber LED is blinking. If not, press the WiFi button to enable WiFi.

2 Remove the label from the back of the LTE7490 and put it on the injector. Connect to the LTE7490 WiFi network using the **WIFI SSID** and **WIFI Key** on the injector label, or on your smartphone simply scan the QR code to connect.


③ Screw the SIM card slot cover back into place.

https://192.168.1.1	← → Ltps://192.168.1.1
User Name: admin Login Password: 1234	ZYXEL LTE7490-M904 User Name admin Password 1234 Login

Open a web browser and go to https://192.168.1.1.

Enter the default username (admin) and password (see label), and then click **Login**. See the User's Guide at www.zyxel.com for more information.


Step 5 Pole / Wall Mounting: Connect M Bracket and Main Frame

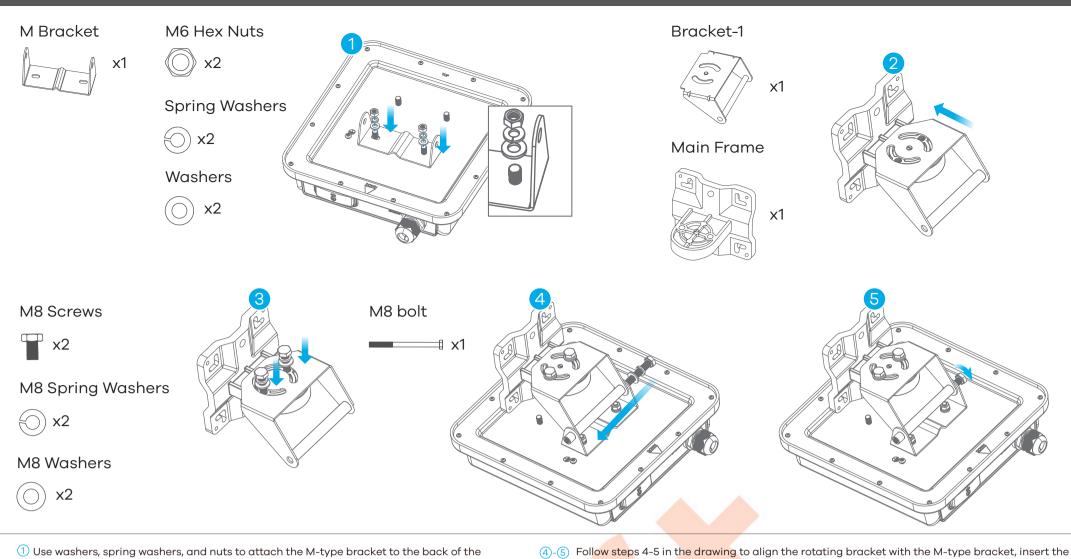

 \bigcirc Use washers, spring washers, and nuts to attach the M-type bracket to the back of the LTE7490.

(2)-(3) Follow steps 2-3 in the drawing to attach the rotating bracket to the mounting main frame using washers, spring washers, and hex nuts. Do not tighten the nuts until you adjust the mounting angle in the final step.

Wall Mounting (Optional)

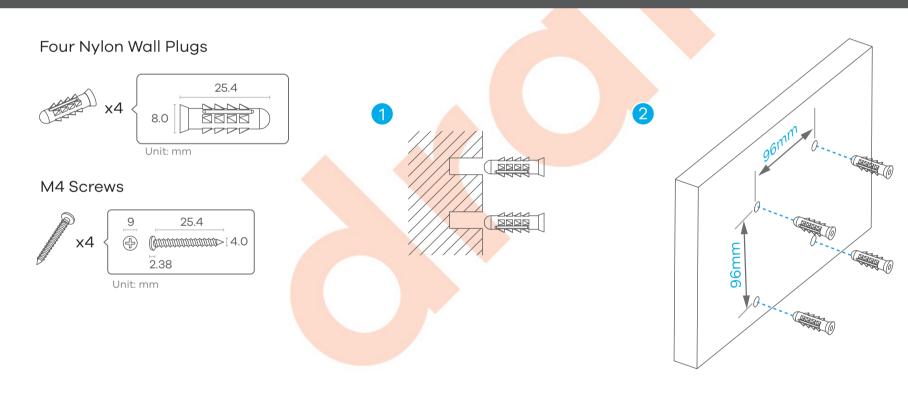


(1) Use the four corner holes of the M bracket to mark holes on a wall. Drill four holes in a wall.

(2) Insert the screw anchors and screws into the holes.


M8 bolt through the holes, and use washers, spring washers, and nuts to secure it.



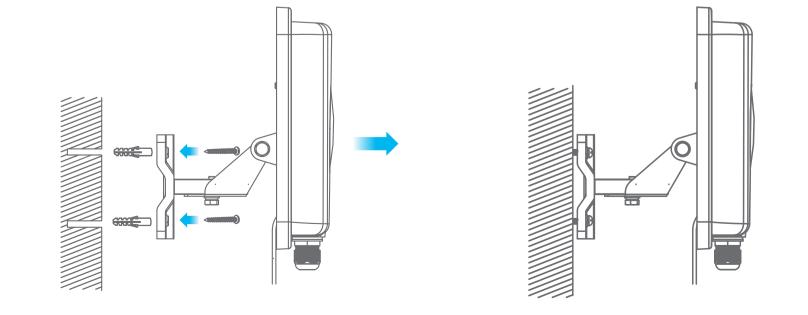


③ Insert nylon wall plugs into the wall. Use mounting screws to secure the main frame to the wall through the nylon plugs.

3/4

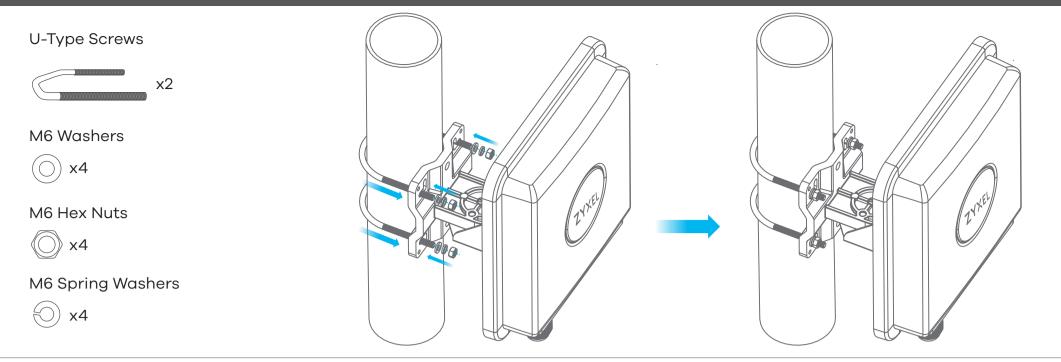

1 Place the U-bolt around a pole. Insert the U-bolt into the holes on the main frame. Use a wrench to secure the main frame to the pole with the washers, spring washers, and nuts.


Table Stand (Optional)

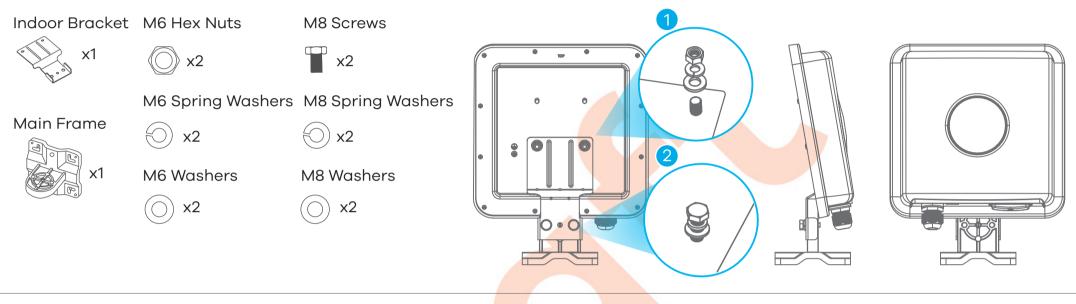


① Use washers, spring washers, and nuts to attach the indoor bracket to the back of the device.

② Use wa<mark>shers, sprin</mark>g washers, and screws to attach the main frame to the indoor bracket.

Step 6 Pole / Wall Mounting Angle Adjustment

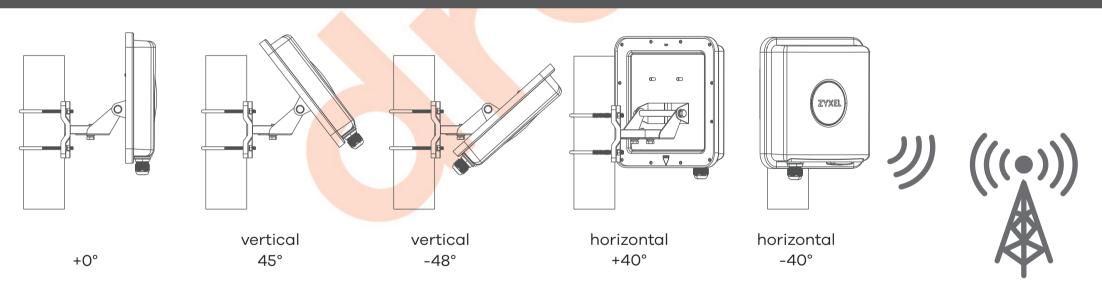

Connect the PoE injector to a power outlet. Use the LTE Ally app to find the optimal LTE signal strength and manage your LTE7490. Note: After configuring the LTE7490, turn WiFi off.

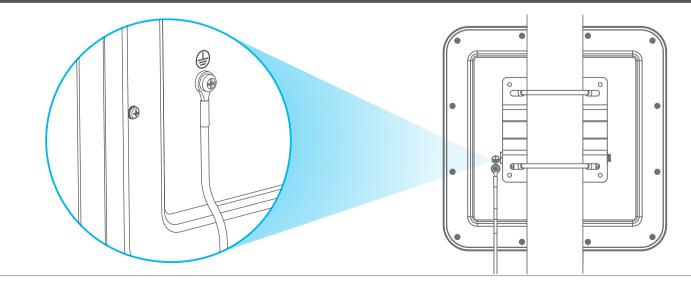

Secure a green/yellow ground cable (18 AWG or smaller) to the LTE7490's rear panel using the M4 ground screw.

Attach the other end of the cable to the ground, either to the same ground electrode as the pole you installed the device on or to the main grounding electrode of the building. Follow your country's regulations and safety instructions to electrically ground the device properly. Qualified service personnel must confirm that the building's protective earthing terminal is valid.